Akiles WBM532 Modular Wire Closer

Instruction Manual



Call Us at 1-800-944-4573

WBM-532 OPERATIONAL MANUAL (WIRE BINDING MODULE)


INTRODUCTION

CONGRATULATIONS ON THE PURCHASE OF YOUR NEW **WBM - 532**, A PROFESSIONAL AND HEAVY-DUTY WIRE BINDING MODULE. YOUR **WBM - 532** WAS DESIGNED WITH A FULL RANGE OF FUNCTION AND PREMIUM QUALITY COMPONENTS TO GUARANTEE YOU AN EFFORTLESS AND PROFESSIONAL BIND, AS WELL AS MANY YEARS OF TROUBLE-FREE SERVICE.

IMPORTANT

WE RECOMMEND THAT YOU TAKE A FEW MINUTES TO FAMILIARIZE YOURSELF WITH THE FUNCTIONS OF YOUR NEW **WBM - 532**. YOU WILL FIND THAT WITH JUST A LITTLE PRACTICE, ANY PERSON CAN ACHIEVE PROFESSIONAL RESULTS.

FEATURES

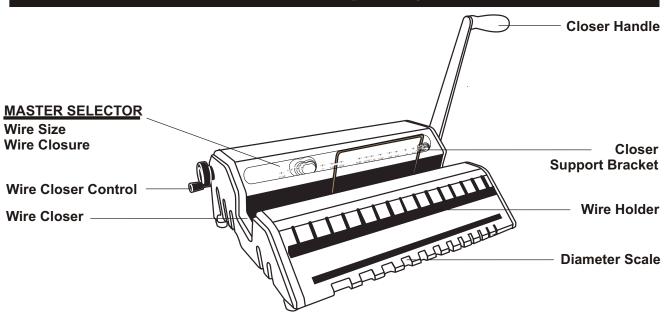

ASSEMBLY & SAFETYINSTRUCTION

- 1. Place your new WBM 532 on top of a sturdy working table. See picture 1
- 2.. Connect the Closing Handle in a vertical position onto the Closing Axle. Tighten the screws counter

clockwise. See picture 2.

3. Caution! Do not touch Wire Closer while operation as it may hurt your hands.







SET-UP

 
Insert a full unbound document into **Diameter Scale**.



- Based on Diameter Scale reading, on the Master Selector you will determine
 - -- Wire Closure
 - -- Wire Size
- 2. Set Wire Closer Control to the wire closure size determined from Step 1.
- (If needed) Use Master Selector to identify the size of your wire.









INSERTING




 
The seam of closed wire should be inside the book. Follow step No.2 instruction for best results.



   - Insert pre-selected wire into Wire Holder.
- Insert document from last pages to first pages then insert front cover.
 The back cover should be inserted last with inside facing up.
- 3. Take out inserted document from Wire Holder to close the wire.







CLOSING



TIPS

The seam of closed wire should be just touching. Slightly adjust the **Closer Control** a little left or right for the under-closed or over-closed seam.

 


 


 


Put inserted document into Wire Closer.

The wire element must stand horizontally at the bottom of **Wire Closer**.











WARRANTY POLICY

YOUR **WBM - 532** HAS A WARRANTY OF ONE YEAR FROM DATE OF PURCHASE. IN THE EVENT OF A MANUFACTURER'S DEFECT, YOUR DISTRIBUTOR (AT OPTION) WILL REPAIR OR REPLACE IT. IMPORTANT: THIS WARRANTY DOES NOT COVER DAMAGES DUE TO IMPROPER USE OR MISS TREATMENT OF THE UNIT, INCLUDING ANY EXTRAORDINARY EVENT LEADING TO THE DAMAGE OF THE MACHINE, WHETHER IT IS REVERSIBLE OR NOT.

IF THE **WBM - 532** IS NOT WORKING PROPERLY, FIRST FOLLOW THE CORRECTIVE ACTIONS ABOVE. IF THE PROBLEM PERSISTS, PLEASE CONTACT YOUR DEALER FOR FURTHER INSTRUCTIONS. PLEASE HAVE YOUR MACHINE'S SERIAL NUMBER AND THE PURCHASE DATE READY. IF THE MACHINE MUST BE RETURNED TO YOUR DISTRIBUTOR, IT IS YOUR RESPONSIBILITY TO PROPERLY PACK AND SHIP IT. AS ANY DAMAGE INCURRED DURING ITS TRANSPORTATION IS NOT COVERED BY OUR WARRANTY POLICY.