

Xyron Model 510 Creative Station Laminate - XRN510ATP

Instruction Manual



Provided by

MyBinding.com
When Image Matters.

Call Us at 1-800-944-4573

Warranty Information

Xyron, Inc. warrants that the Xyron® 5" Creative Station™ is free from defects in material and workmanship for a period of one (1) year from the date of purchase. Xyron, Inc. will repair or replace a defective product or part without charge, provided it is returned to the address below, freight prepaid with proof of purchase. If the product is damaged by neglect or misuse, the warranty is null and void.

To register your product online, please go to www.xyron.com and click on the product registration tab. **If you register online, we will send you a free inspirational DVD full of great ideas!**

Customer Service

We want you to be happy with your purchase of a Xyron product. If for any reason you have a problem or a question, we would like to hear from you before you consider returning it to the store where you bought it. In many cases, we will be able to solve your problem or answer your question right over the phone; so please contact Xyron Customer Service toll-free at **1-800-793-3523** or **1-480-443-9419** for help. You can also e-mail us at: customerservice@xyron.com

For customer service outside of the U.S.

Australia: 61 2 8899 8500; australiacustomers@esselte.com
New Zealand: 64 9 272 1600; nzcustomers@esselte.com

The purchase or acquisition of this product does not confer the right or license to use the machine and cartridges in the retroreflective field or to make or sell machines or cartridges for use in the retroreflective field. May contain one or more of the following U.S. patents 5580417, 5735998, 5961779, 6244322, 6270612, 6660120, 7087280. Other U.S. and foreign patents pending.

©2007 Xyron, Inc.
7400 East Tierra Buena Lane
Scottsdale, AZ 85260 USA

Visit www.xyron.com for more information and great project ideas

Part# 5718_RevA

An  Company

X YRON® 5" Creative Station™ User Guide

The Xyron 5" Creative Station is a Sticker Maker, Laminator, Label and Magnet Maker all in one. Perfect for so many of your craft, school, home and office projects, it's even safe enough for kids to use, requiring no heat, batteries or electricity. The 5" width allows you to create photo stickers, photo magnets, laminated recipe cards, business cards, labels for jars and cabinets and many other projects.



Refill Cartridges Available*



Permanent Adhesive
Strongest hold
For difficult surfaces

Perfect for:

Photos, paper crafts, scrapbooking and card making, school and home projects, home décor, vellum, rubber stamping, and fabric, ribbon, metal and other 3-dimensional items



Repositionable Adhesive
Reposition multiple times
Best on smooth surfaces
Stick it. Unstick it. Restick it.
Safe for windows, painted walls and doors, and it does not leave a residue on most surfaces. Test in an inconspicuous area first.

Perfect for:

Kid's stickers, paper crafts, scrapbooking and card making, school and home projects, stenciling, vellum, games and photos



Two-Sided Laminate
Preserve and protect documents
Allows you to cut right to the edge or completely through the item you are protecting. It will not separate!

Perfect for:

 
Photos, ID's, recipe cards, kid's artwork, memorabilia, newspaper clippings, bookmarks, business cards and tags



**Matte Laminate/
Permanent Adhesive**
Preserve and protect documents with a Matte Laminate finish on the top and Permanent Adhesive on the bottom

Perfect for:

Photos, paper crafts, scrapbooking, card making, memorabilia, classroom aids, food jar and packaging labels, displays, signs, banners and labels




Laminate/Magnet
Create magnets with a Laminate finish

Perfect for:

Photos, business cards, frames, school and home projects, shopping and To-Do lists

*Refill Cartridges sold separately

 Features & Functions

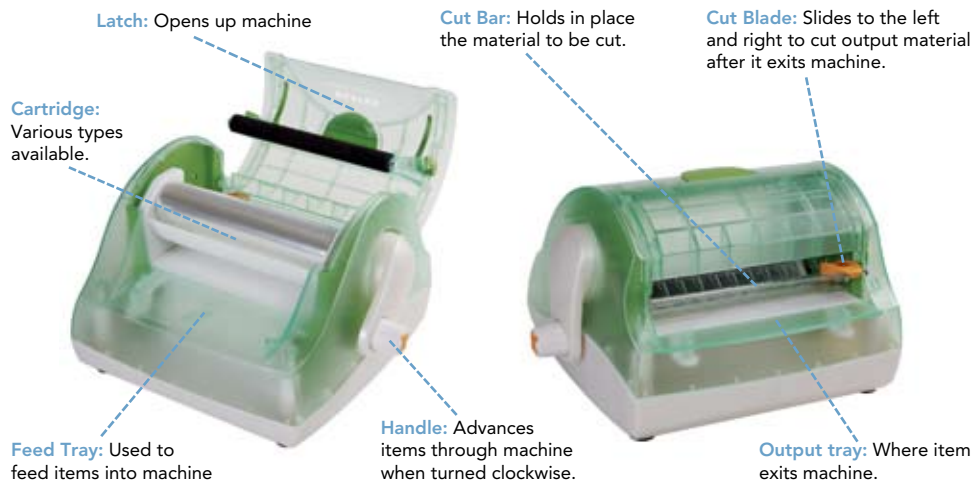

Unloading



1. Open cartridge compartment by lifting up on latch.



2. Gently pull cartridge up and out of machine.



3. You can unload/load the cartridge even though it may not be completely used.

Loading



1. Guide cartridge into machine using tracks on machine sides.



2. Make sure that film is placed underneath the clear cut bar.



3. Close the lid by pressing down on latch until it clicks into position. Advance material slightly to assure perfect results.

Basic Operation as easy as 1-2-3!



Step One

Place item on feed tray.



Step Two

Guide item forward while slowly turning knob clockwise until your item comes out of the back of the machine.



Step Three

Press down on cut blade and slide to the left or right to cut.
Note: For a smooth cut, place your finger all the way back to the back of the cut blade holder. Remember to burnish or rub well on adhesive items before removing film.

Helpful Hints

- For best results, turn the handle slowly.
- Burnish or rub around your adhesive items well before removing the top film.
- Arrange small items (without overlapping them) on the feed tray to maximize your cartridge material use.
- Use items that are .10" thickness or less.
- If there is excess adhesive around edges of an item, simply wipe off with your fingers.
- Fabric Tips:
 - Works well with most fabrics that do not have sizing
 - For items that will be washed, stitch after adhering
 - For best results, use Acid-Free Permanent Adhesive
- If machine rollers pick up adhesive after use, clean with isopropanol alcohol.
- Store your machine and cartridge between 40°F and 70°F.
- To prevent curling on adhesive, remove the clear top mask first. Then lay your document upside down to remove the backing from the sticky side.
- To maximize the material when making a magnet frame, place a smaller item in the middle of the frame.