

Akiles Megabind 2 Comb Binding Machine with Wire Closer

Instruction Manual



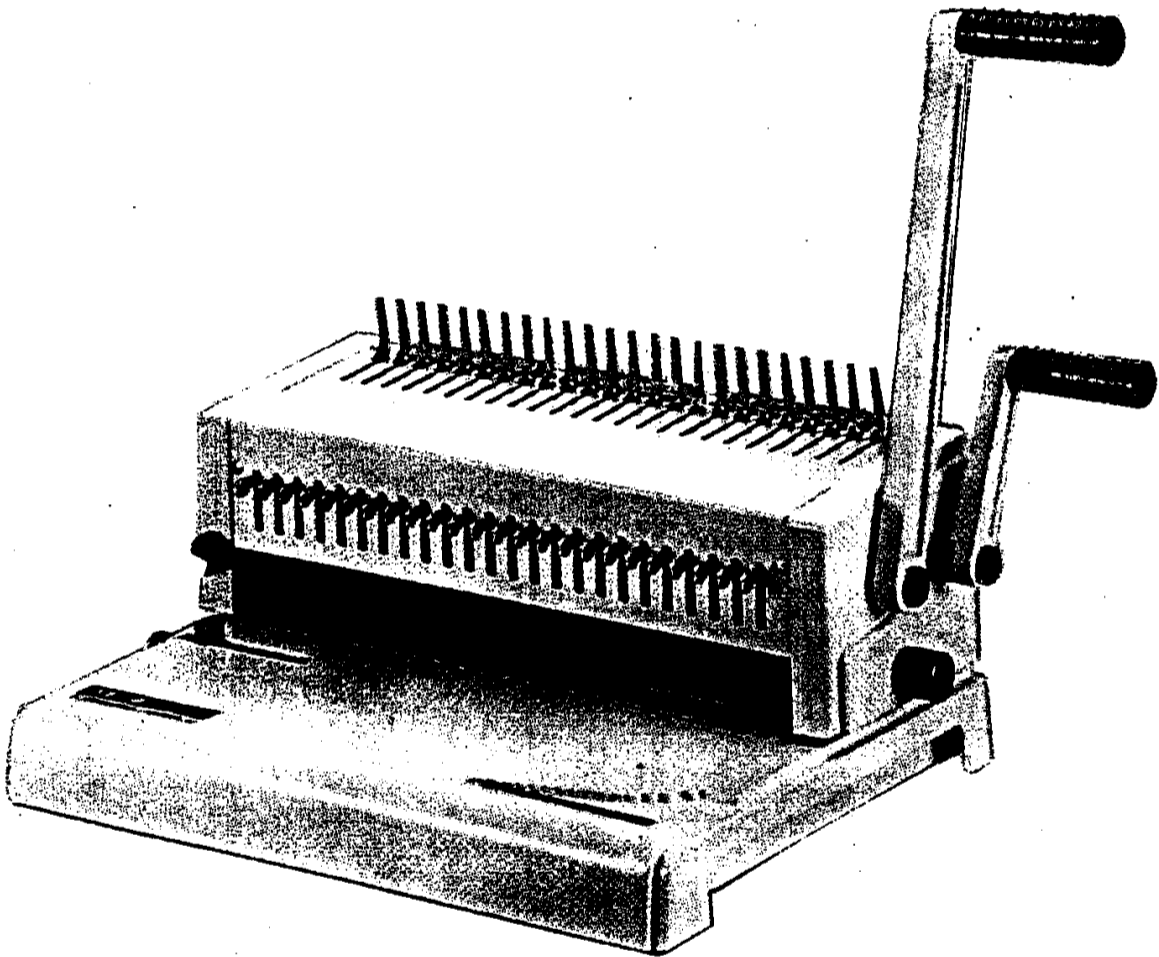 
Provided by

MyBinding.com
When Image Matters.

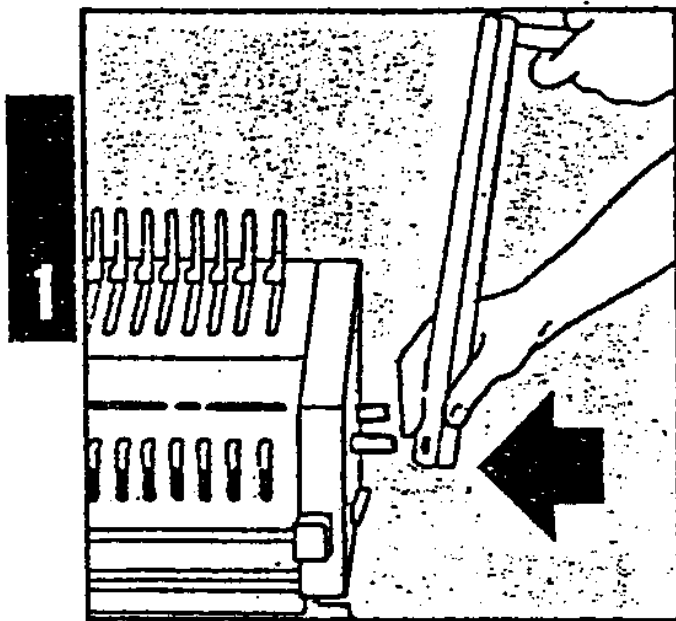 
Call Us at 1-800-944-4573



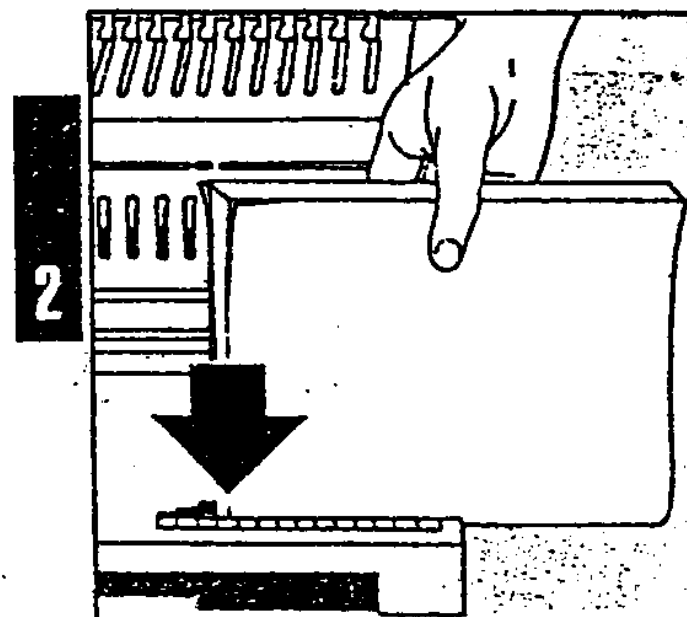 
MegaBind - 2



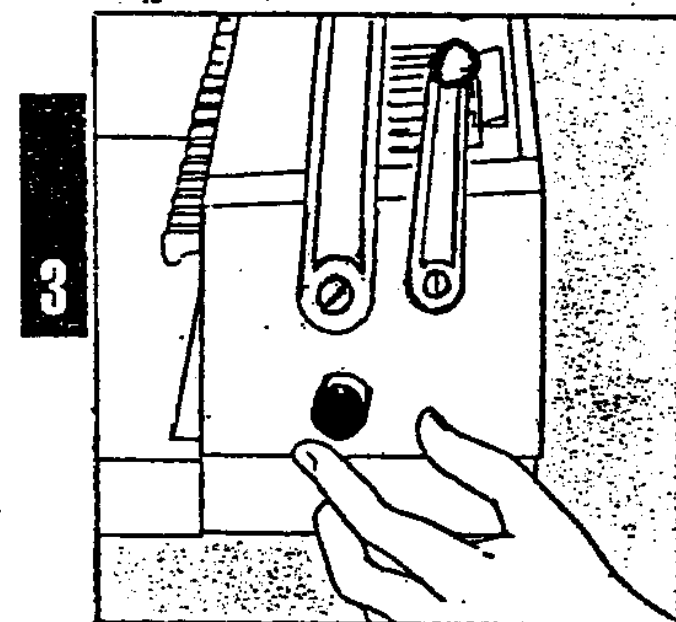 
PLASTIC AND WIRE PUNCH-BIND OPERATING INSTRUCTIONS


Fitting handles

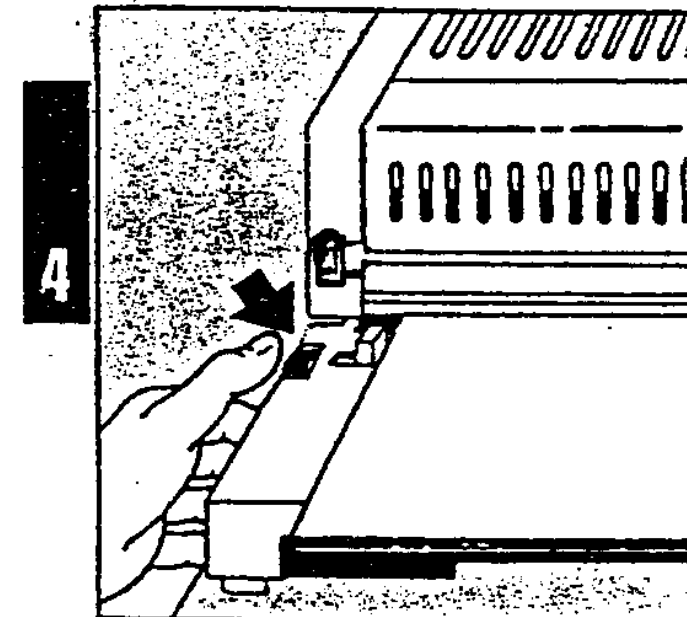 
Place the large handle onto the front shaft in the vertical position and fix with the screw provided. Secure the small handle position behind the large handle.


Choosing the correct binding comb

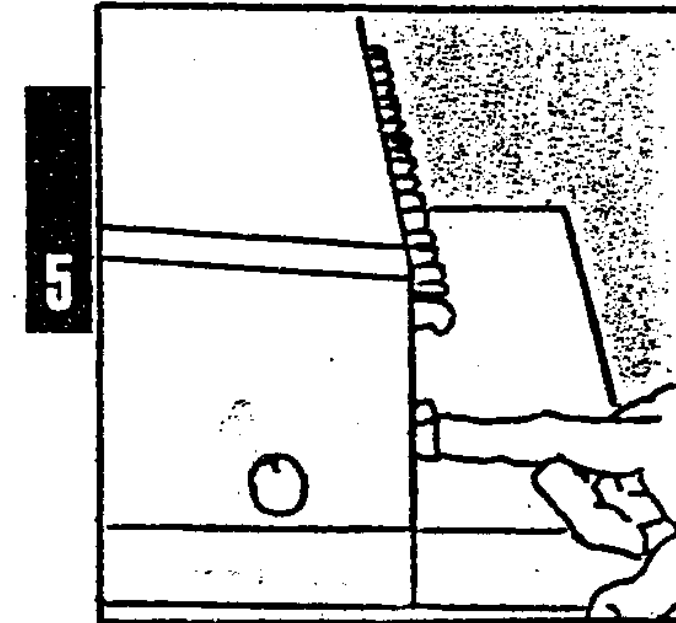 
Slide the pages to be bound into the machine's Binding size guide until they come up against one of the marks. The number you read off gives you the diameter of the binding comb to use.


Punching depth

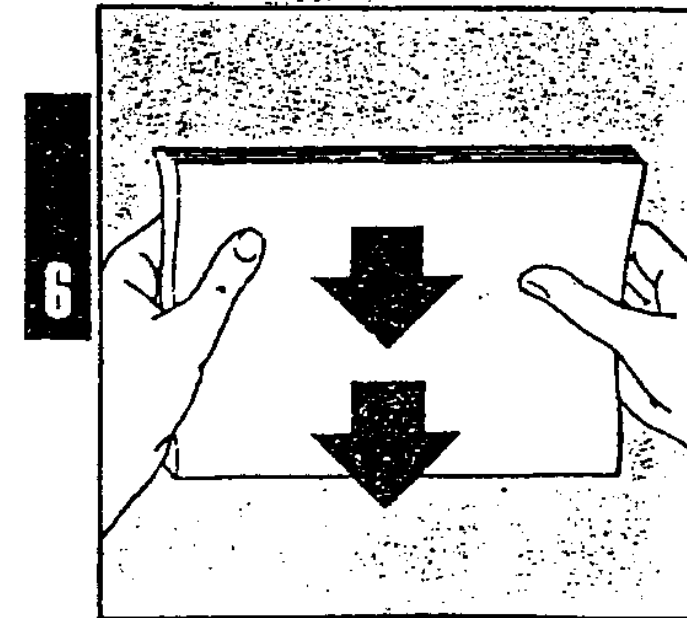 
The black knob on the right side of the machine is used to select the margin depth.


Paper stop

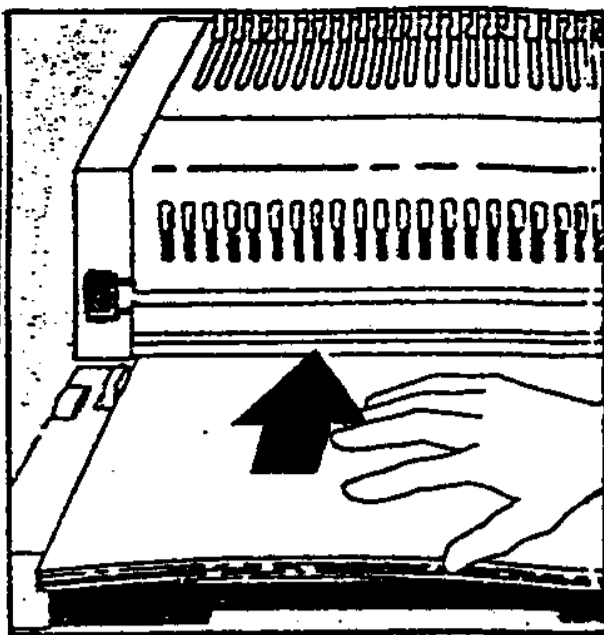 
Centre the paper so that the edges of the paper are not cut.


Caution

During punching, the slide button for wire binding must be pushed in completely.

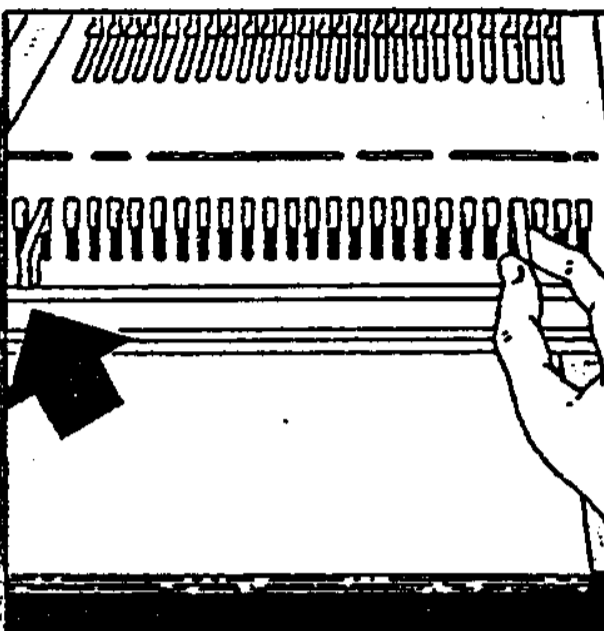 

Fanning out and jogging the sheets

Fanning out and jogging the paper enables all sheets to be placed flush against the paper stop for punching.

7

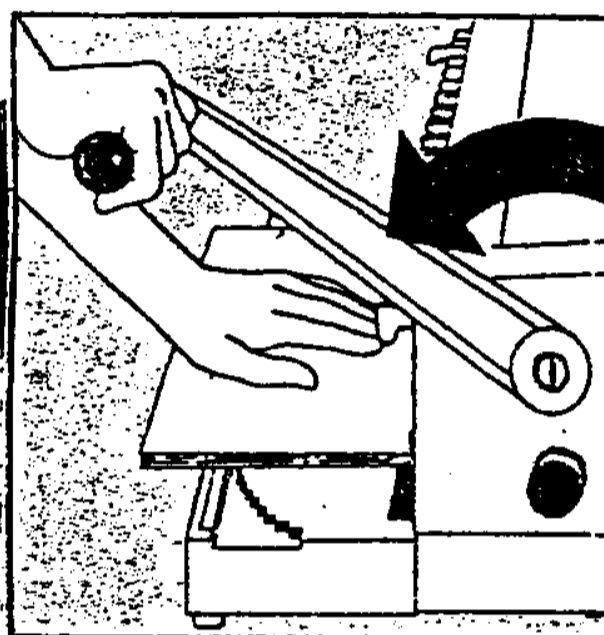 
Inserting paper into the machine

Push the paper into the machine, jogged side first, against the rear and side stops.

8

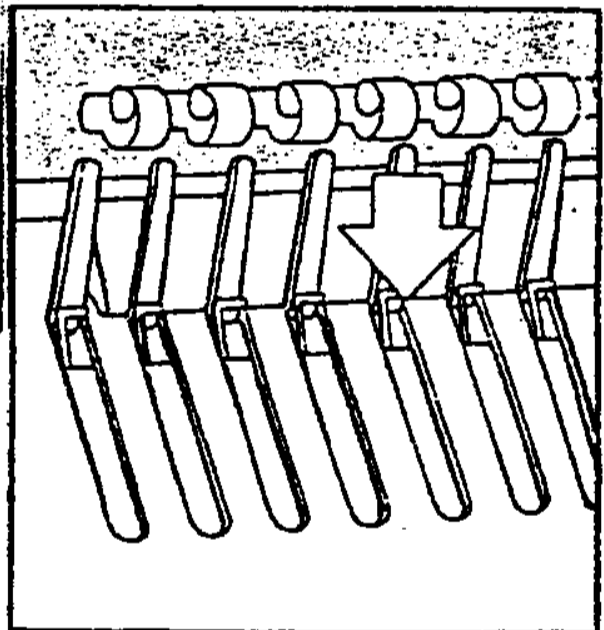 
Punching set-up

Place the sheets on the punch alignment scale to determine the number of holes needed. The rectangles represent the exact position of the holes. If the rectangles were covered by the sheet edges, pull the set pin outward corresponding the rectangles. Always flush the sheets against the paper stop.

9

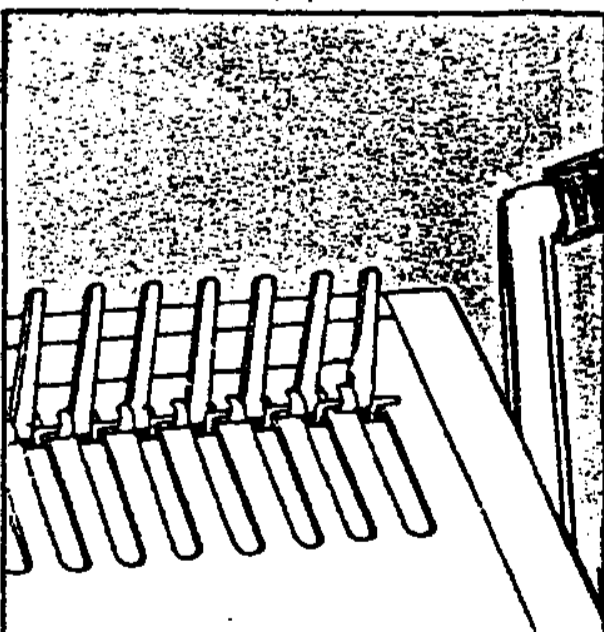 
Punching

When punching, hold the paper firmly and pull the crank lever forwards and down.

10

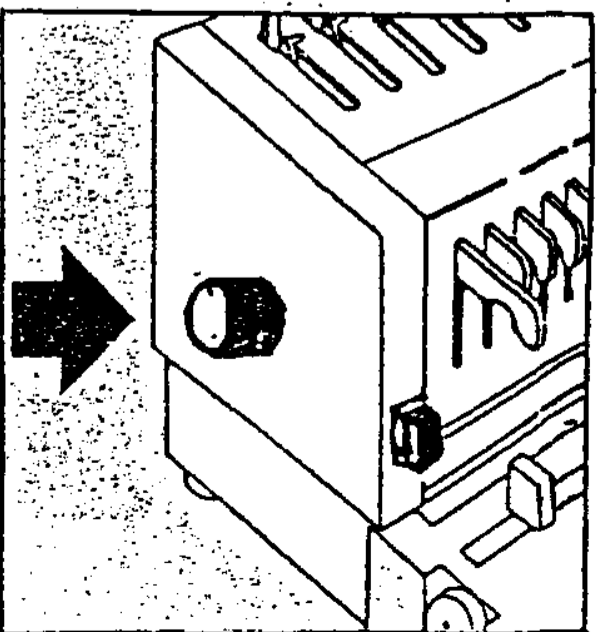 
Plastic binding

Place the binding comb behind the metal fingers with the open side up.

11

Opening the binding comb

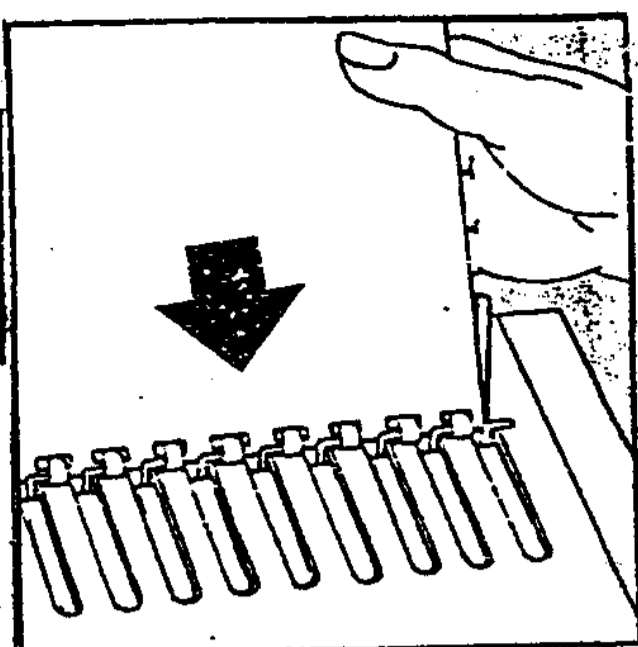 
Pull the small handle for the hook to engage the ring for binding.

12

Aid with larger numbers of copies

The black button on the left side of the machine is used to fix the binding mechanism at a certain binding comb diameter for opening.

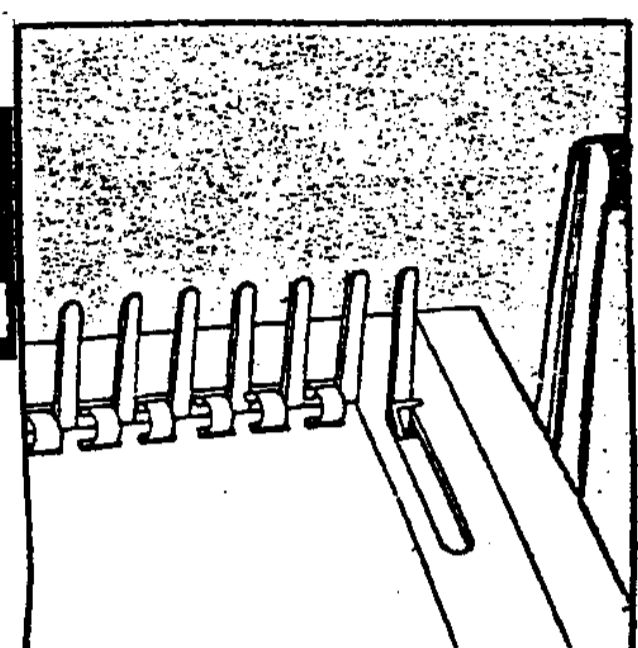 
13



Placing the paper in the binding comb

Holding the punched sheets vertically (page 1 in front), place them in the binding comb and lay them down forwards.

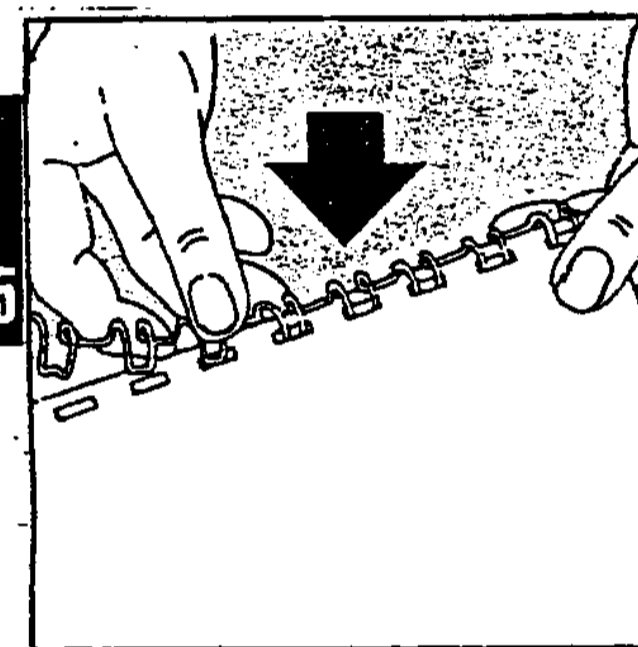 
14



Removing the bound sheets

Return the handle to the vertical position and remove the bound sheets. If one or more sheets have to be replaced or added later the bound sheets can be opened and reclosed any number of times.

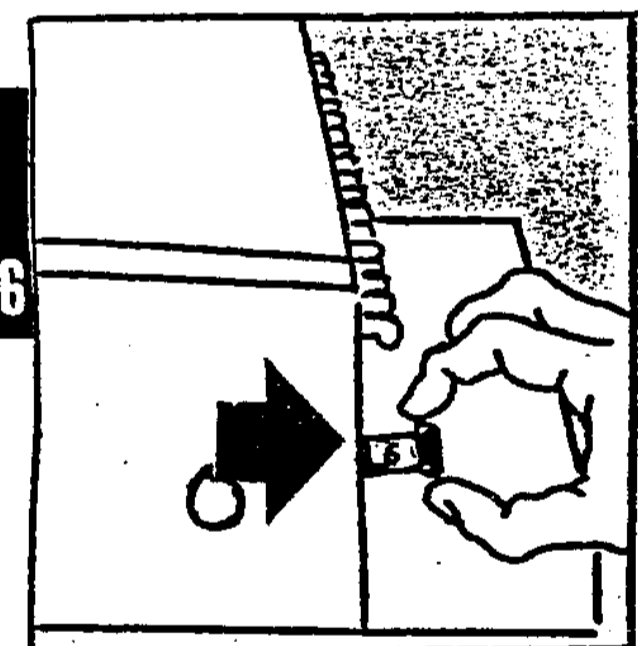 
15



Wire binding

Place the punched sheets for binding on the edge of a table so that the wire comb can be introduced into the punch holes.

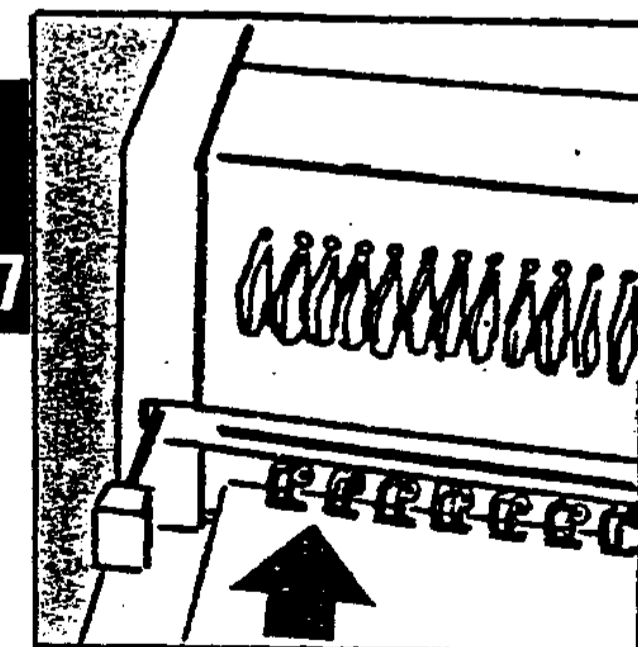 
16



Set the closing mechanism

Position the slide button to the wire diameter. The number or line must be fully visible, as this will allow ideal closing of the wire into a round shape.

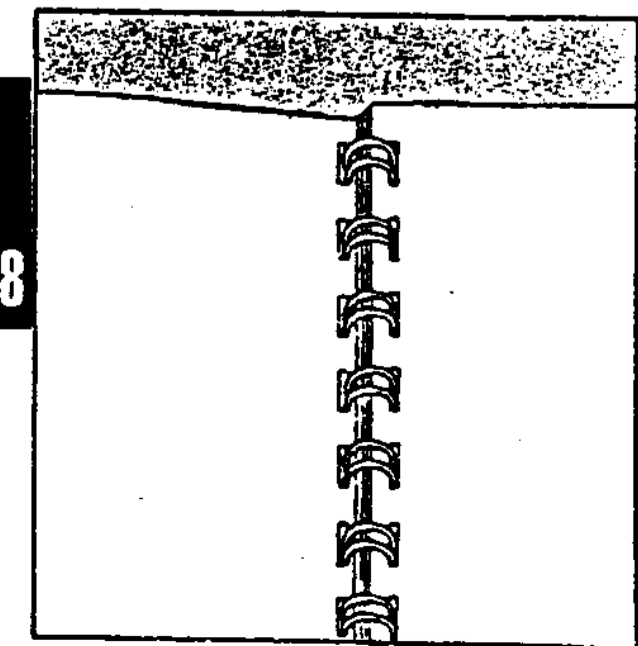 
17



Closing the wire

Insert the sheets to be bound with the open part of the wire comb to the rear against the back of the binding area and pull the lever down to close the wire comb.

18



The job is done!