

Formax FD 215S 18" Semi Automatic Paper Creaser

Product Spec Sheet



Provided by

MyBinding.com
When Image Matters.


Call Us at 1-800-944-4573

Standard Features:

- Prevents tearing or cracking of digital printouts
- Electric creasing operation
- Foot-pedal, hands-free operation
- All-metal construction
- Easily adjustable paper stops
- Scale in inches (1/32") and metric (1mm)
- Built-in handles make moving the unit easy

Applications:

- Glossy cover stocks with grain going in the wrong direction
- Ink or toner-based stocks
- Pamphlets/brochures
- Greeting cards
- Covers used for booklets or perfect bound books

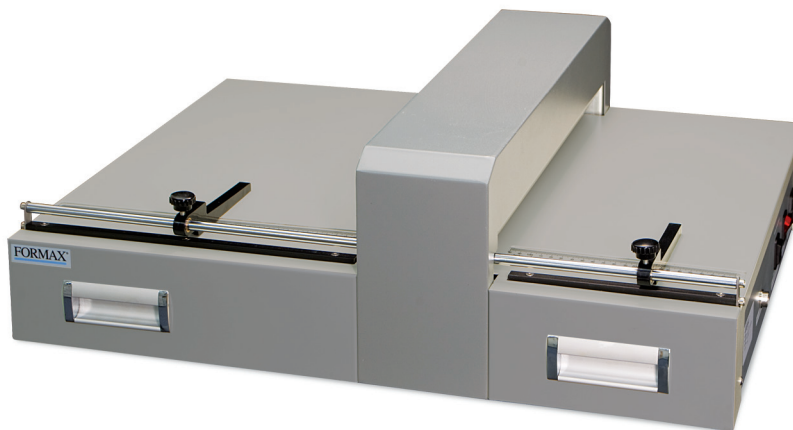

Professional Results at Your Fingertips

The Formax FD 215S Electric Paper Creaser is designed to prevent tearing or cracking in toner-based digital printouts. Creasing sheets prior to folding ensures a clean, professional finish and makes it easier for folding devices to fold with accuracy.

The FD 215S offers hands-free foot-pedal operation for increased efficiency. It features a clearly-marked indicator scale for accurate positioning of each crease, and side guides that are quickly and easily adjusted.

It's ideal for small print shops, and applications including greeting cards, postcards, brochures, invitations, CD covers and more.

Specifications:

Maximum paper width:	Up to 18" (460mm)
Minimum paper size:	5.75" (146mm)
Maximum paper weight:	Up to 18 pt cover
Minimum paper stop position:	1.8" (46mm)
Maximum paper stop position:	14.75" (375mm)
Width of crease:	.062" (1.6mm)
Depth of crease:	.019" (.5mm)
Dimensions:	27.95" W x 21.25" D x 9" H (710 x 540 x 245mm)
Weight:	83 lbs (37.6kg)
Power:	110V, 60Hz, 120W
Safety Certifications:	CE Approved

MyBinding.com
5500 NE Moore Court
Hillsboro, OR 97124
Toll Free: 1-800-944-4573
Local: 503-640-5920



Adjust side guides



Load sheet to be creased



Choose either push-button or foot-pedal operation



Sheet is creased and ready for crack-free folding