

Pro-Lam Plus 330 ***Akiles Pouch Laminator***

Instruction Manual



Provided by

MyBinding.com
When Image Matters.

Call Us at 1-800-944-4573

Dual Heat System Laminator


OPERATIONAL MANUAL

► INTRODUCTION:

Congratulations on the purchase of your new Prolam *Plus*, a heavy duty pouch laminator. Your Prolam *Plus* was specially designed with the highest available technology and premium quality components to render you a high quality lamination as well as many years of trouble-free service. The Prolam *Plus* can operate with any standard laminating pouch currently available in the market, with or without using carrier. Note: we only recommend the use of carriers with inferior quality pouches (high adhesive composition), as they may excrete excessive adhesive, which can potentially damage the system.

► OUTSIDE FEATURES:

Important: we recommend that you take a few minutes to familiarize yourself with the functions of your new Prolam *Plus*. You will find out that with just a little practice, anyone can achieve a professional lamination.

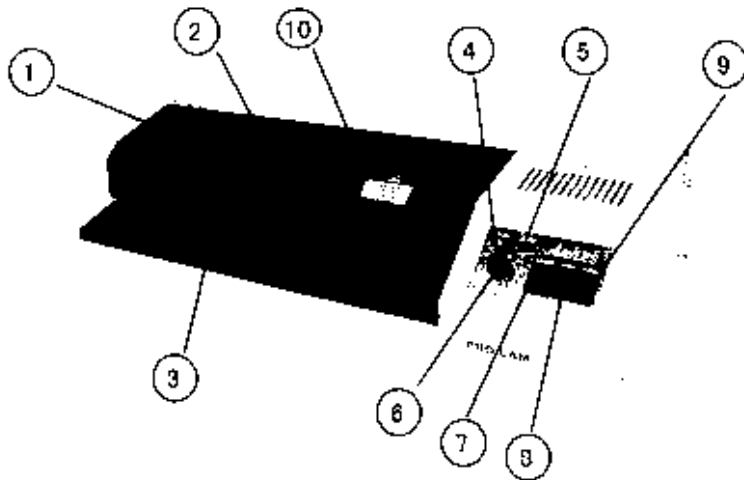

1	Upper Cover
2	Rear Guide Plate
3	Front Guide Plate
4	Ready Light
5	Power Light
6	Temperature Control Knob
7	Heat / Cold Switch
8	Forward / Reverse Switch
9	Power Switch
10	Fan

► OPERATION:

- Place your new Prolam *Plus* on top of a sturdy working table.
- Plug power to a grounded 110v outlet (220v for the 220v models).
- Press the Power Switch (10) to the ON position. The Power Light (5) will turn on indicating that the Prolam *Plus* has been activated.
- Adjust the Temperature Control Knob (6), to the desired position.
- Press the Forward /Reverse Switch to the forward position.
- Press the Heat / Cold switch (7) to the heat position for thermal lamination . The Ready Light (4) will turn on in approximately 3-4 minutes, letting you know that the Prolam *Plus* is ready to start laminating. (for cold lamination press the Heat / Cold Switch to the cold position)
- Introduce the document to be laminated into the pouch.
- Introduce the pouch (sealed side first) into the entrance (3) of the Prolam *Plus*. **Remark:** When laminating small pouches(with short-side less than 3" long) that do not require the use of carriers, insert your pouch with the short-side first, to make sure it clears the gap between the front & back rollers.
- Remove the pouch from the Rear Guide Plate (2) of the Prolam *Plus*
- Turn "off" the Power Switch (9) once you have finished laminating.

Dual Heat System Laminator

SAFETY INSTRUCTIONS

1. Keep fingers, hair, jewelry, necktie and any loose clothing or objects away from the Prolam *Plus* entrance, as they may be accidentally pulled into the rollers. In case of any entanglement, press the reverse button right away, if entanglement persists cut off the power supply at once.
2. Do not allow children to operate the machine. The Prolam *Plus* is not a toy.
3. Always turn power switch Off when not in use.
4. To reduce the risk of electric shock, never operate the Prolam *Plus* near water or with wet hands.
5. Do not operate the Prolam *Plus* if the power cord is damaged.
6. Do not allow the power cord to be in contact with hot surfaces.
7. Do not operate the Prolam *Plus* with the cover open.
8. Do not touch the cover, rubber rollers or heating parts while the Prolam *Plus* is working or if the machine is still hot.
9. Do not place articles on top of the Prolam *Plus*.
10. In case of malfunction, return the unit to your distributor for service. This equipment does not contain any part that can be serviced by the consumer or operator.

WARRANTY

Your Prolam *Plus* has a warranty of one year from date of purchase. In the event of a manufacturer's defect, your distributor (at option) will repair or replace it. Important: This warranty does not cover damages due to improper use or miss treatment of the unit, including any extraordinary event leading to the damage of the machine, whether it is reversible or not.

If the Prolam *Plus* is not working properly, first follow the operation instructions. If the problem persists, please contact your dealer for further instructions. Please have your machine's serial number and the purchase date ready. If the machine must be returned to your distributor, it is your responsibility to properly pack and ship it, as any damages incurred during its transportation is not covered by our warranty policy.