 


786 ECO-Wheasel[®]

 
 
 

 


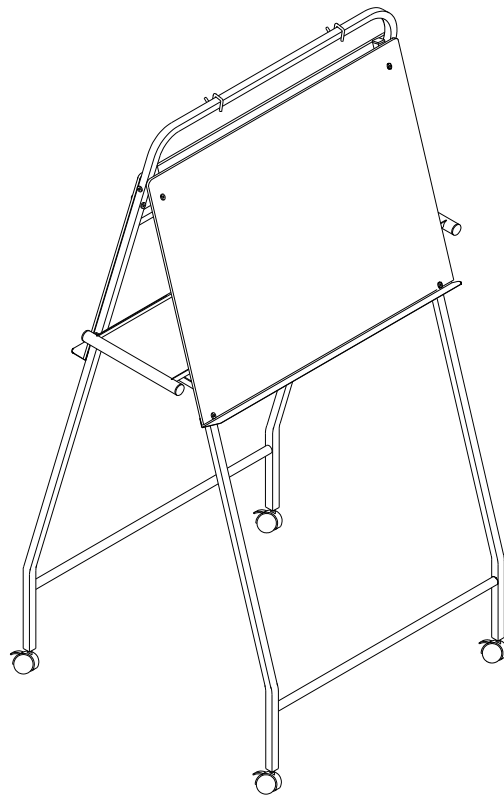


 
 

 





 
 

 


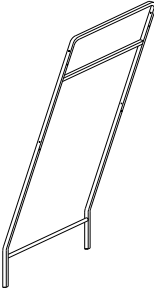


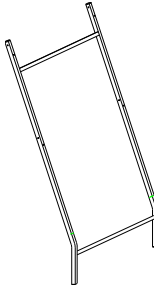 

 
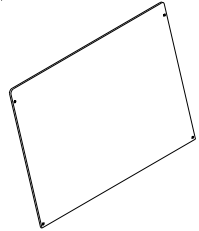 
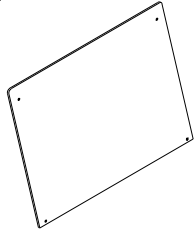 
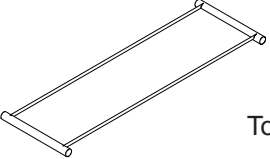 

Foldable Easel on Wheels with Shelf



Assembly Instructions

ECO-Wheasel®

Foldable Easel on Wheels

Part	Drawing	Description	Qty																																							
P-1		Leg (wide)	1 EA	<div>Hardware List</div> <table><tr><td>A</td><td></td><td>2" Socket Screw</td><td>2 EA</td></tr><tr><td>B</td><td></td><td>1 1/4" Socket Screw</td><td>4 EA</td></tr><tr><td>C</td><td></td><td>5/8" Socket Screw</td><td>8 EA</td></tr><tr><td>D</td><td></td><td>Screw Post</td><td>8 EA</td></tr><tr><td>E</td><td></td><td>Flat Washer</td><td>6 EA</td></tr><tr><td>F</td><td></td><td>Lock Nut</td><td>6 EA</td></tr><tr><td>G</td><td></td><td>2" Locking Caster</td><td>4 EA</td></tr><tr><td>H</td><td></td><td>Allen Wrench</td><td>2 EA</td></tr><tr><td>I</td><td></td><td>Caster Wrench</td><td>1 EA</td></tr></table>			A		2" Socket Screw	2 EA	B		1 1/4" Socket Screw	4 EA	C		5/8" Socket Screw	8 EA	D		Screw Post	8 EA	E		Flat Washer	6 EA	F		Lock Nut	6 EA	G		2" Locking Caster	4 EA	H		Allen Wrench	2 EA	I		Caster Wrench	1 EA
A		2" Socket Screw	2 EA																																							
B		1 1/4" Socket Screw	4 EA																																							
C		5/8" Socket Screw	8 EA																																							
D		Screw Post	8 EA																																							
E		Flat Washer	6 EA																																							
F		Lock Nut	6 EA																																							
G		2" Locking Caster	4 EA																																							
H		Allen Wrench	2 EA																																							
I		Caster Wrench	1 EA																																							
P-2		Leg (narrow)	1 EA																																							
P-3		Side Hinge	2 EA																																							
P-4		Board Tray	2 EA																																							
P-5		Marker Board (wide leg)	1 EA																																							
P-6		Marker Board (narrow leg)	1 EA																																							
P-7		Top Shelf	1 EA																																							
P-8		Flip Chart Hook	2 EA																																							

Tool required: Adjustable Crescent Wrench

ECO-Wheasel[®]

786

Assembly Instructions

READ THROUGH INSTRUCTIONS FROM BEGINNING TO END BEFORE STARTING TO ASSEMBLE UNIT.

To Assemble:

1. Identify and Separate all the Parts and Hardware.
2. Assemble Legs (P-1) and (P-2) at the top by using 2" Socket Screws (A). Place the Flat Washer (E) in between the legs and finger tighten the Lock Nut (F) at this time. See illustrations # 1 and 1a.

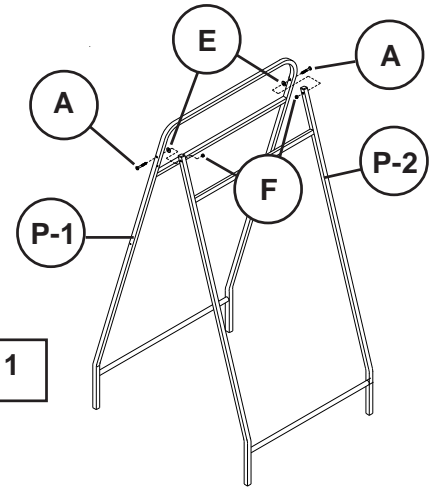 


Illustration # 1

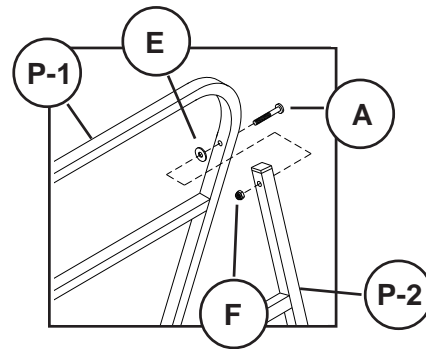 


Illustration # 1a

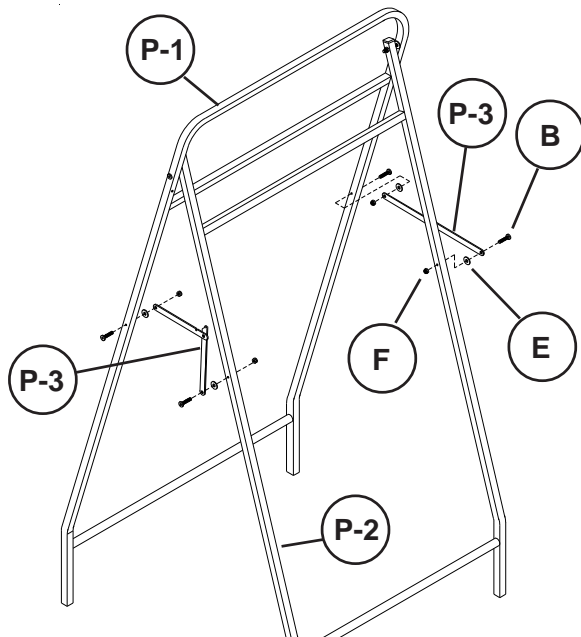 


Illustration # 2

3. Assemble Side Hinges (P-3) by using 1 1/4" Socket Screw (B). Place the Flat Washer (E) in between the Side Hinge (P-3) and legs and fasten from inside with Lock Nut (F). Tighten by holding the Lock Nut (F) with the Adjustable Crescent Wrench and turn the 1 1/4" Socket Screw (B) with Allen Wrench (H). See illustrations # 2.

 
 
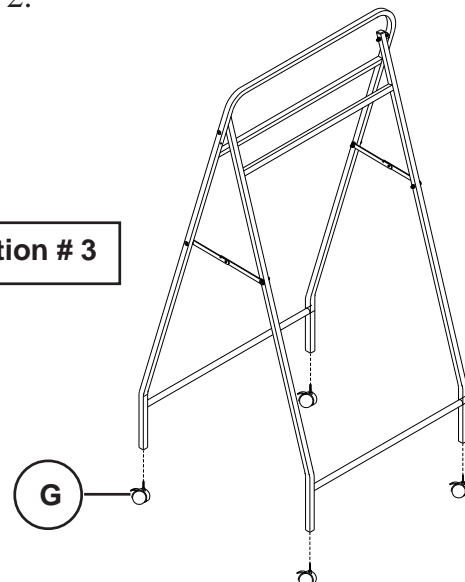 


 
Illustration # 3

4. Assemble Casters (G) by turning the unit to it's side and fasten by using Caster Wrench (I). See illustrations # 3.

5. Assemble Marker Board (P-5) by inserting 5/8" Socket Screw (C) through the Marker Board (P-5) and through the Board Tray (P-4). Insert board and tray through the Leg (P-1). Use the Screw Post (D) from the back of the Leg ((P-1) and tighten by using Allen Wrenches (H). See illustrations # 4.

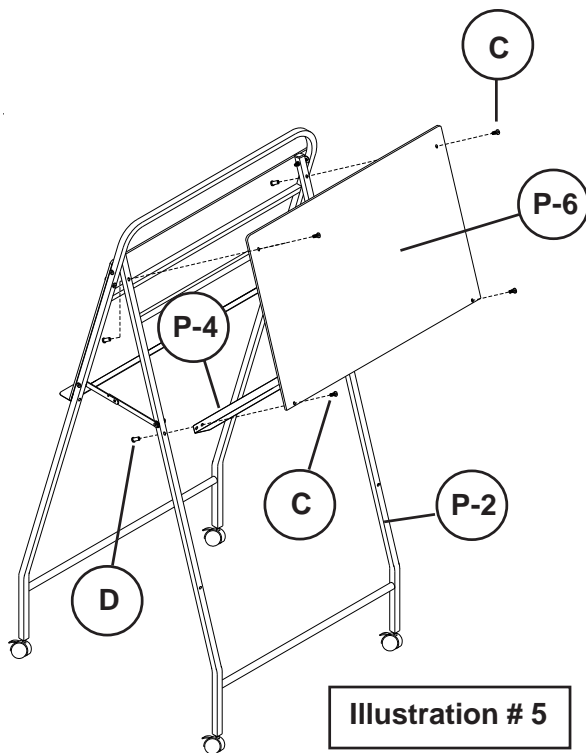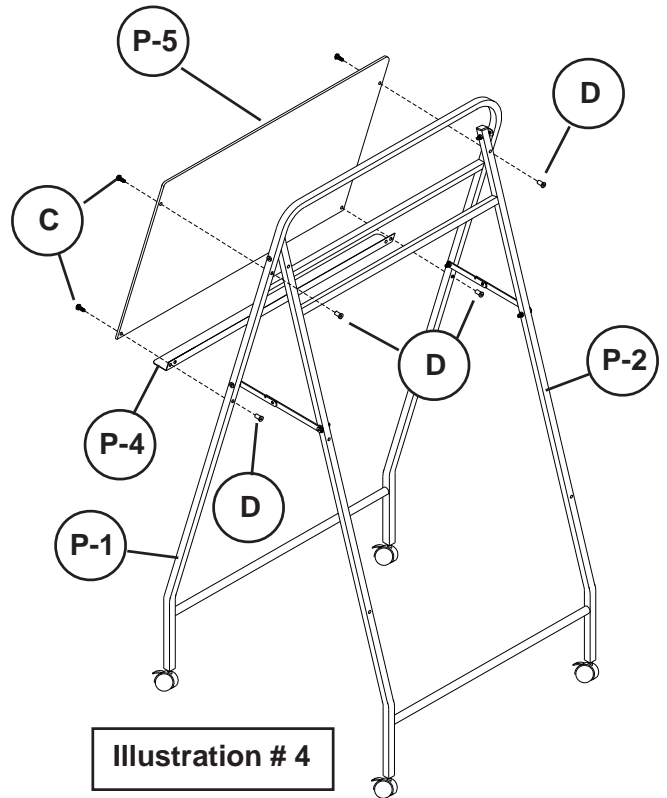

6. Assemble Marker Board (P-6) by inserting 5/8" Socket Screw (C) through the Marker Board (P-6), and Board Tray (P-4). Insert board and tray through the Leg (P-2). Use the Screw Post (D) from the back of the leg and tighten with Allen Wrenches (H). See illustrations # 5.

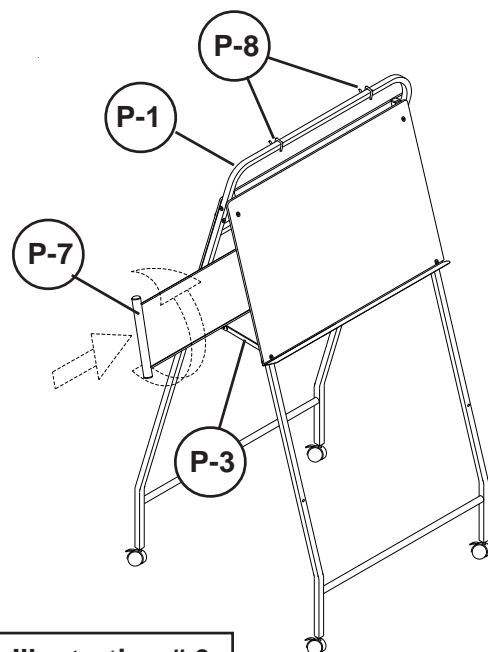

7. Place the Top Shelf (P-7) by simply turning the shelf and sliding through the legs. Top Shelf (P-7) should rest over the Side Hinges (P-3). To place the Flip Chart Hooks (P-8) simply set the hooks over the top of the Leg (P-1) tube. See illustrations # 6.
8. Tighten all frame Screws and Nuts with Allen Wrenches and Cresent Wrench before using.