

DAHLE VANTAGE TRIMMER

Instruction Manual



Provided By

MyBinding.com®
When Image Matters.

Users Manual

Vantage Trimmer Models 12E, 15E, 18E

- For use in trimming paper, photographs, and thin cardboard, etc.
- 12" (12E), 15" (15E), 18" (18E) trimming lengths
- Automatic clamping system provides comfortable and safe trimming
- Scale in cm and inches with a 1/2" grid for easy sizing of material

Safety Instructions

- To avoid injuries, use the trimmer on a solid, level, and secure surface.
- Always secure the blade after use.
- Keep young children away from the trimmer.
- Do not touch the cutting blade with your fingers.

Usage


- The upper blade is fixed into place during non-operation. To release the upper blade gently push to the right approximately 1/2" and lift up.
- Place the mat
- backstop to the correct position.
- Press the blade down slowly. The clamp will then automatically hold the material to be cut in place.
- After the cut
- to the right 1/2", dropping the blade down slightly and then pushing the handle slightly back to the left.

If you have any questions, please call a Customer Service Representative at (800) 243-8145.

Vantage Trimmer

Thanks for purchasing a
DAHLE Vantage® Trimmer.

*Be sure to read the User
Manual before using your
new Vantage® Trimmer.*

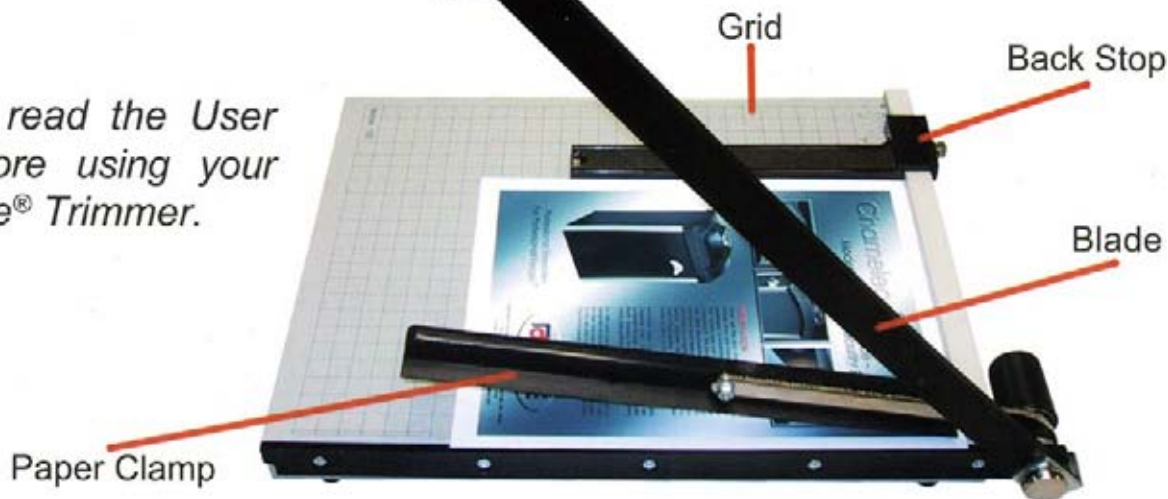

DAHLE
NORTH AMERICA

375 Jaffrey Road / Peterborough, NH 03458 / Tel: 800.995.1379 / Fax: 603.924.1616 / eMail: info@dahle.com

www.dahle.com


MyBinding.com
When Image Matters.