Dahle Vantage 12E Personal 12 Inch Guillotine Paper Cutter


Instruction Manual



Call Us at 1-800-944-4573



Best used for trimming paper, cardstock & photographs

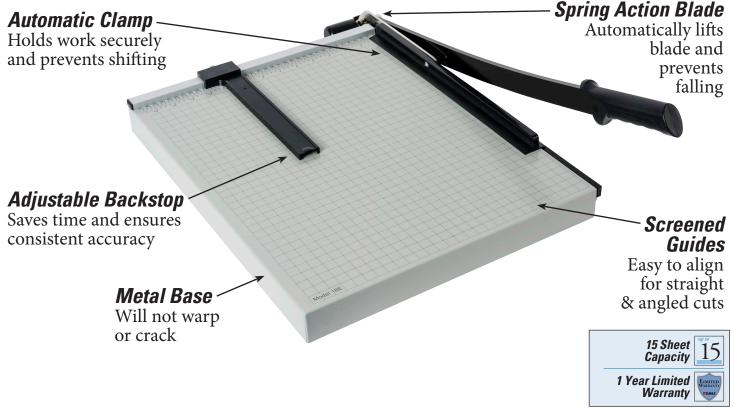

Safety Instructions

- To avoid injuries, use the trimmer on a solid, level, and secure surface.
- Always secure the blade to the base after use.
- Keep young children away from the trimmer.
- Do not touch the cutting blade with your fingers.

Usage

- The cutting blade is secured into place during non-operation. To release the upper blade, gently push to the right approximately ½" and lift up.
- Place the material to be cut on the surface of the trimmer. With the use of the markings, size the material to the desired length or set the backstop to the correct position.
- Press the blade down slowly. The clamp will automatically hold the material in place.
- After the cutting process is complete, lift the blade to release the clamp and remove the material. Secure the blade by slightly pushing to the right $\frac{1}{2}$ and dropping the blade down slightly.

If you have any questions, please call a customer service representative at (800) 995-1379.

