

Dahle Vantage 18E Personal 18 Inch Guillotine Paper Cutter

Instruction Manual



Provided by

MyBinding.com
When Image Matters.

Call Us at 1-800-944-4573

User Manual

Dahle Vantage Trimmer

DAHLE[®]

Models 12E, 15E, 18E

Best used for trimming paper, cardstock & photographs

Automatic Clamp

Holds work securely and prevents shifting

Spring Action Blade

Automatically lifts blade and prevents falling

Adjustable Backstop

Saves time and ensures consistent accuracy

Metal Base

Will not warp or crack

Screened Guides

Easy to align for straight & angled cuts

15 Sheet Capacity

up to 15

1 Year Limited Warranty



Safety Instructions

- To avoid injuries, use the trimmer on a solid, level, and secure surface.
- Always secure the blade to the base after use.
- Keep young children away from the trimmer.
- Do not touch the cutting blade with your fingers.

Usage

- The cutting blade is secured into place during non-operation. To release the upper blade, gently push to the right approximately ½" and lift up.
- Place the material to be cut on the surface of the trimmer. With the use of the markings, size the material to the desired length or set the backstop to the correct position.
- Press the blade down slowly. The clamp will automatically hold the material in place.
- After the cutting process is complete, lift the blade to release the clamp and remove the material. Secure the blade by slightly pushing to the right ½" and dropping the blade down slightly.

If you have any questions, please call a customer service representative at (800) 995-1379.

NOVUS[®] **DAHLE**[®]

Dahle North America, Inc.

49 Vose Farm Road

Peterborough, NH 03458

(800) 995.1379 / www.dahle.com

