Fellowes C-525C Cross-Cut Shredder - 3350301

Instruction Manual



Call Us at 1-800-944-4573



POWERSHRED® C-525/C-525C THE WORLD'S **TOUGHEST** SHREDDERS™



Please read these instructions before use. Do not discard: keep for future reference.

Fellowes

Quality Office Products Since 1917



KEY

- A. Safety Flap
- B. Paper entry
- C. Disconnect switch (open door)
- D. Door
- E. Basket paper (inside)
- F. Casters
- G. See safety instructions
- H. Control Panel and LEDs
 - ♠ 1. 0N/0FF
 - R 2. Reverse
 - 3. Bin full
 - 4. Door open
 - 5. Safety Flap Open
 - 6. Low oil
 - 7. Auto oil complete

INDICATOR LIGHTS



Stops automatically when door is opened. Symbols flash alternately



Stops automatically when bin is full. Empty bag when bag full indicator lights up



Stops automatically if too much paper is inserted. **Automatic** reverse if paper jams



Stops automatically if safety flap is opened. Symbols flash alternately



Overload protection. Machine stops to cool down- approx. 10-15 minutes. Symbols flash alternately



Cutting shafts are automatically oiled



Oil bottle is empty

CAPABILITIES

Will shred: Paper, credit cards, CD/DVDs, staples, paper clips, junkmail and 3.5" diskettes.

Will not shred: Adhesive labels, continuous form paper, transparencies, newspaper, cardboard, laminates, file folders, X-rays or plastic other than noted above.

Paper shred size:

Strip-Cut	1/4 in. (6mm)
Cross-Cut	$.3/16$ in. x $1-1/2$ in. $(4mm \times 40mm)$

Maximum:

Sheets per pass (Strip-Cut)	41-50*
Sheets per pass (Cross-Cut)	28-34*
Paper entry width	12 in. (305mm)

*8.5 in. x 11 in., 20lb., (75g) paper at 120V, 60 Hz, 15Amps; heavier paper, humidity or other than rated voltage may reduce capacity. Recommended maximum daily usage rates: 10,000 sheets per day. Sheets per pass: C-525: 41-50; C-525C: 28-34

*In order to perform at capacity, shredder must be plugged into a dedicated 20Amp, 120V outlet and auto oil system must be engaged.

ADVANCED PRODUCT FEATURES



Lubricates the cutters automatically to enhance performance and extend shredder life



Sleep Mode

Energy saving feature shuts down the shredder after 1 hour of inactivity

WARNING: IMPORTANT SAFETY INSTRUCTIONS — Read Before Using!







- Keep away from children and pets. Keep hands away from paper entry. Always set to off or unplug when not in use.
- Keep foreign objects gloves, jewelry, clothing, hair, etc. — away from shredder openings. If object enters top opening, switch to Reverse (R) to back out object.



- Never use aerosol products, petroleum based lubricants or other flammable products on or near shredder. Do not use canned air on shredder.
- - Do not use if damaged or defective. Do not disassemble shredder. Do not place near or over heat source or water.
- This shredder has a Disconnect Power Switch (C) in the door. The door must be closed to operate shredder. In case of emergency, open door. This action will stop shredder immediately.
- Avoid touching exposed cutting blades under shredder head.
- Shredder must be plugged into a properly grounded wall outlet or socket of the voltage and amperage designated on the label. The grounded outlet or socket must be installed near the equipment and easily accessible. Energy converters, transformers, or extension cords should not be used with this product.
- Do not operate the machine without the safety flap closed (A).

BASIC SET-UP

BASIC SHREDDING OPERATION

SHREDDER SET-UP



Ensure access to a dedicated 20Amp, 120V



Make sure safety flap is securely in place

PAPER



Plug in and make sure door is closed



Press (4) ON to activate



Feed paper straight into paper entry and release



When finished shredding set to (c) OFF



Do nothing and shredder will go automatically to sleep mode after 1 hour

OILING SET-UP

outlet



Remove oil bottle holder from cabinet



Hook oil bottle holder into side of cabinet



Remove lid from oil bottle



Put oil tube into oil Place oil bottle into oil holder on bottle and screw stopper on side if cabinet



Close door. Plug into socket-outlet

DO



ON (©) after 15 seconds


Oil pump starts automatically on first use. To stop Oil Indicator (△) from blinking red, press



After changing oil bottle, press Reverse (R) until Oil Indicator (a) no longer blinks red

SHEET CAPACITY GAUGE

Eliminates frustrating jams by preventing overloads.

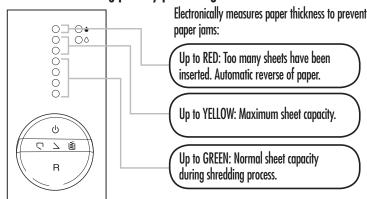

SLEEP MODE

WHEN IN SLEEP MODE







To get out of sleep or press ON (🖒)



insert paper

TROUBLESHOOTING AND PREVENTIVE MAINTENANCE

- Empty wastebasket when bin full indicator lights up.
- Shredder won't run if the door is open, or bin needs to be emptied.
- Maintenance is an important part of protecting your investment. Don't forget to purchase our oil (3505801) and shredder bags (3604101). Go to Support Section at www.fellowes.com or see back page of manual for useful telephone numbers.

PAPER JAM

Set to Off (c) and empty bin. Replace bin and follow the below procedures.





Stops automatically if too much paper is inserted. Automatic reverse if paper jams

Gently pull uncut paper from paper entry. Machine runs for a short time in reverse. Repeat if necessary

CLEANING AUTO-START INFARED SENSORS

Paper detection sensors are designed for maintenance free operation. However, on rare occasions the sensors may become blocked by paper dust causing the motor to run even if there is no paper present (Note: two paper detection sensors are located in the center of the paper entry).

TO CLEAN THE SENSORS



Turn off and unplug shredder



Locate Auto-start infared sensor



Use thin, long-handled brush to clean sensors. Make sure brush is clean and dry



Clean any contamination from the paper sensors



POWERSHRED C-525/C-525C THE WORLD'S TOUGHEST SHREDDERS"

WARRANTY

Limited Warranty: Fellowes, Inc. ("Fellowes") warrants the parts of the machine to be free of defects in material and workmanship and provides service and support for 1 year from the date of purchase by the original consumer. Fellowes warrants the cutting blades of the machine to be free from defects in material and workmanship for the lifetime of the shredder. If any part is found to be defective during the warranty period, your sole and exclusive remedy will be repair or replacement, at Fellowes' option and expense, of the defective part. This warranty does not apply in cases of abuse, mishandling, or unauthorized repair. The user is responsible for any additional costs incurred by Fellowes in servicing the paper shredder outside of the country

where the shredder is initially sold. ANY IMPLIED WARRANTY, INCLUDING THAT OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED IN DURATION TO THE APPROPRIATE WARRANTY PERIOD SET FORTH ABOVE. In no event shall Fellowes be liable for any consequential or incidental damages attributable to this product. This warranty gives you specific legal rights. The duration, terms, and conditions of this warranty are valid worldwide, except where different limitations, restrictions, or conditions may be required by local law. For more details or to obtain service under this warranty, please contact us or your dealer.

Questions or Concerns?

www.fellowes.com Troubleshooting Registration Manuals	Customer Service & Support Troubleshooting Replacement parts General questions
Australia	+1-800-33-11-77
Canada	+1-800-665-4339
Europe	00-800-1810-1810
Mexico	+1-800-234-1185
United States	+1-800-955-0959

