H. Wilson 42" High Black Tuffy Utility A/V Cart with Pullout Shelf (3-Shelf Putty Legs)

Instruction Manual



Call Us at 1-800-944-4573


LUXOR H.WILSON

3 Shelf Tuffy Cart Instructions


NOTICE: Leg lengths of leg E may be shorter than leg F Optional fluted legs for units with



E ×4

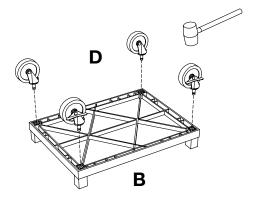


Install optional cabinet pack / pullout shelf / locking drawer assembly after step 1

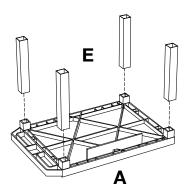


3

BX1

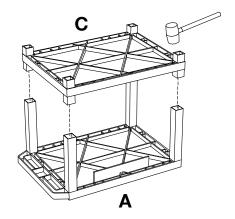


4

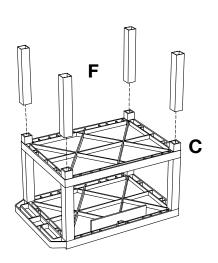

5

cabinet pack

F ×4

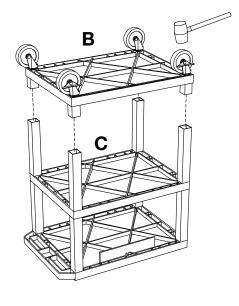

6



LUXOR H.WILSON

Front Pullout Shelf Instructions

 
Tuffy Cart

Parts List

Tools Required

- Phillips Screwdriver
















 Lay the top shelf of your Tuffy cart upside down and Install the four legs intended for this shelf.




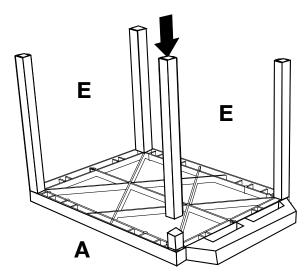


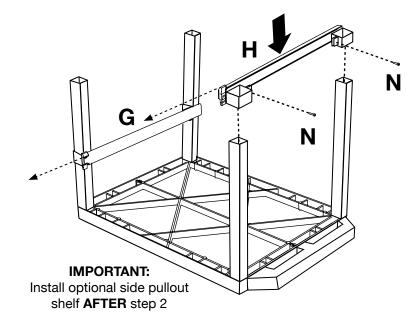

Take pullout shelf **K** and bracket **L** and screw together into the unfinished surface of shelf K with screw M.

Mount pullout shelf K to runner H & G so that the edge of the shelf snaps into the runner hooks.

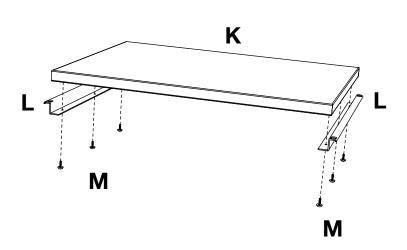

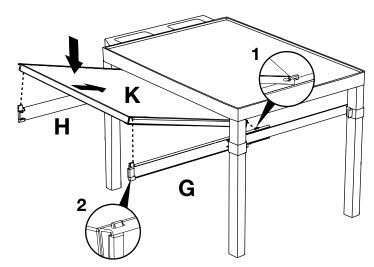


You have now completed your pullout shelf.

LUXOR H.WILSON

Electric Assembly Instructions

Number of outlets may vary.

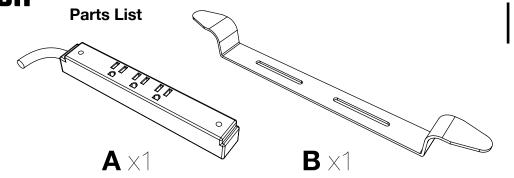

Tools Required

- Screwdriver





