Standard Horizon JogFast Paper Jogger

Instruction Manual



OPERATOR'S MANUAL

Standard Jog-FastTM Jogger



Read this manual, and thoroughly familiarize yourself with its contents before operating or servicing this equipment.





®STANDARD

INTRODUCTION:

Thank you for selecting the Standard Jog-Fast™ Jogger. The Standard Jog-Fast™ Jogger has been developed for ease of operation and maintenance, however, we recommend that you familiarize yourself with the machine by carefully reading these instructions.

WARNING: THIS MACHINE CONTAINS MOVING PARTS THAT CAN CATCH HAIR OR LOOSE CLOTHING AND PINCH FINGERS. DURING OPERATION AND MAINTE-NANCE KEEP HANDS, HAIR AND LOOSE CLOTHING CLEAR OF MOVING PARTS. SERVICE OR DISASSEMBLY SHOULD BE DONE WITH POWER CORD DISCONNECTED.

INSTALLATION:


Remove Jog-Fast™ Jogger from carton. Remove 2 bolts at bottom which secure packing material to jogger.

Plug unit into any 115V 60HZ/A.C. outlet. Turn Switch "ON". (a light will indicate "ON" position.) Load paper.

MAINTENANCE:

Lubricate bearings with light oil every 6 months.

Occasionally, if necessary, remove any debris from bearings with a brush or an air jet stream. See parts list for bearing locations.

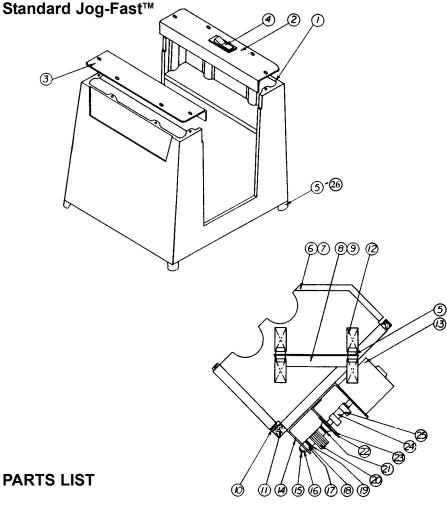

KEY DESCRIPTION	PART NO.	QUAN.	KEY DESCRIPTION	PART NO.	QUAN.
1. Base	W-0400001	1	14. Motor Base	W-0400014	1
2. Top Cover-R.H.	W-0400002	1	15. Counter Shaft	W-0400005	1
3. Top Cover-L.H.	W-0400003	1	16. Bearing-Flange	M-S013010	1
4. Switch	M-S033051	1	17. Set Collar	M-S037302	2
Bumpers	M-S030045	12	18. Washer-Nylon	M-S019024	2
6. Side Panel-R.H.	W-0400008	1	19. Thrust Washer	M-S008088	1
7. Side Panel-L.H.	W-0400009	1	20. Counterweights	W-0400004	6
8. Side BcktR.H.	W-0400010	1	21. Spring Washer	M-S008086	1
9. Side BcktL.H.	W-0400011 1	1	22. Bearing	M-S013047	1
10. Wood Tray-Bottom	W-0400006	1	23. Motor Base Bckt.	W-0400013	1
11. Wood Tray-Back	W-0400007	1	24. Motor Coupling	W-0400012	1
12. Springs	M-S031074	8	25. Clamps	M-S037314	2
13. Motor	M-S021030	1	26. Suction Cups	M-S030048	4