

***Stanley Bostitch QuietSharp
Gray Executive Electric
Pencil Sharpener -
BOSEPS8HDGRY***

Instruction Manual



Provided by

MyBinding.com
When Image Matters.

Call Us at 1-800-944-4573

EPS8RBLK size: 140X101mm (5.5" x4")

HOW TO USE YOUR BOSTITCH® QUIETSHARP EXECUTIVE™ ELECTRIC PENCIL SHARPENER

1. Insert the AC plug into the nearest, easily-accessible 120-volt outlet.
2. Insert pencil into the opening, Motor will start automatically.
3. The TipSaver™ feature indicates that your pencil is sharpened by a change in motor sound and by decreased resistance.
Do not force the pencil any further.
4. Remove sharpened pencil from unit to prevent motor damage.

MAINTENANCE & SAFETY INSTRUCTIONS. To ensure smooth, trouble-free sharpening:

- Make sure the receptacle is in place and tightly closed before operating your sharpener.
- Empty the receptacle on a regular basis. The pencil sharpener will not operate properly when full.
- Always unplug the sharpener before cleaning or emptying the receptacle.
- Do not sharpen writing instruments such as crayons, chalk, or soft waxy pencils as they will clog your sharpener's cutters.
- Clean the cutters if they become clogged. First unplug your sharpener, then remove and empty the receptacle.
Clean the cutter blades by wiping them off with a dry cloth to remove the residue. Do not use grease, oil or abrasive cleansers.
- Never submerge your sharpener in water, plugged or unplugged.
- Never pull on the cord to turn the sharpener off. Instead, take hold of the plug and pull it slowly out of the outlet.
- As with all electrical appliances, keep out of the reach of small children.
- This power unit is intended to be correctly orientated in a vertical or floor mount position.

7 Year Limited Warranty - U.S.A. and Canada Only

Effective December 1, 2005 Bostitch® L.P. warrants to the original retail purchaser that the product purchased is free from defects in material and workmanship, and agrees to repair or replace, at Bostitch's option, any defective Stanley Bostitch® branded office product (7) years from date of purchase. Warranty is not transferable. Proof of purchase date required. This warranty covers only damage resulting from defects in material or workmanship; it does not cover conditions or malfunctions resulting from normal wear, neglect, abuse, accident or repairs attempted or made by other than our national repair center or authorized warranty service centers. Driver blades, sharpener cutters, punch heads, and cutting discs are considered normally wearing parts. You are responsible for the costs of shipping the defective product to Stanley Bostitch® or its designated repair center. For optimal performance of your Stanley Bostitch® products, always use genuine Stanley Bostitch® staples and replacement parts.

THIS WARRANTY IS THE EXCLUSIVE WARRANTY OF BOSTITCH® L.P., AND IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. BOSTITCH® L.P. SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

For information on our warranty claim procedure please visit us at www.BostitchOffice.com or contact us at 1-800-343-9329.

In Canada, please contact us at 1-800-567-7705.