

# ***Tamerica TCC 2700***

## ***27" Roll Laminator***

### Parts List



*Provided by*

**MyBinding.com**  
*When Image Matters.*

Call Us at 1-800-944-4573

# TCC-2700 LAMINATOR PART MANUAL


DATE: 1/18/2006

DRAWING NO	PART NO	DESCRIPTION	DRAWING NO	PART NO	DESCRIPTION
001	RLM-1	RACKET	028	RLM-24	FIXED BUSH
002	RLM-2	TOP ROLLER	028-1	RLM-24-1	FIXED BUSH
003	RLM-2A	BOTTOM ROLLER	029	RLM-25	CU BUSH
004	RLM-3	GUIDE PLATE	029-1	RLM-25-1	BUSH
005	RLM-4	FIXED PLATE	030	RLM-26	PANNEL RACK
006	RLM-5	DC MOTOR	031	RLM-27	CONTROL PANEL
007	RLM-6	PRESS PLATE	032	RLM-27-1	PCB
008	RLM-7	POWER RACKET (R)	032-1	RLM-27-2	LED PCB
008-1	RLM-7-1	POWER RACKET (L)	033	RLM-28	AL PLATE
009	RLM-8	UPPER HEATER (R)	034	RLM-29	TRANSMIT PARTS
009-1	RLM-8-1	UPPER HEATER (L)	035	FD-39	BUSH
010	RLM-9	GUIDE PLATE	036	RLM-31	QUARTZ TUBE
011	RLM-10	FEEDING PLATE (L)	036-1	RLM-31-1	HEATER
012	3H1-D30	THERMO SET	036-2	3H1-P8-3B	FIXED SCREW
013	RLM-12	FEEDING PLATE (R)	037	RLM-32	HANDLE
014	RLM-13	PAD	038	RLM-33	FIXED PLATE
015	RLM-14	FEEDING ROLLER	039	3H1-P9	SILICON PAD
016-2	RLM-15A	EXPAND SHAFT	040	RLM-37	CLIP-PLATE A
016-3	RLM-15A-1	EXPAND SHAFT	040-1	RLM-38	CLIP-PLATE B
017	RLM-16	FIXED SHAFT	041	RLM-39	SPACER
018	RLM-17	ADJUSTMENT SHAFT	042	CB-3	GUIDE SCREW
019	RLM-18	REAR PLATE	043	B-6-3	GUIDE NUT
020	RLM-19	INNER COVER	044	RLM-42	SPRING
021	RLM-20-1	CHAIN GEAR	045	RLM-43	SPRING
022	RLM-20-2	CHAIN GEAR (A)	046	RLM-44	SPRING
023	RLM-20-3	CHAIN GEAR (B)	047	3H1-D33	THERMO PLATE
024	RLM-32-1	HANDLE	048	SB-4	FOOT PAD
025	RLM-21	FIXED PLATE	049	RLM-45	CHAIN
026	RLM-22	SIDE COVER (R)	050	RLM-46	QUARTZ TUBE CAP
026-1	RLM-22-1	SIDE COVER (L)	051	RLM-47	TRIMMER
027	RLM-23	ADJUST SHAFT	052	RLM-48	SWITCH





# TCC-2700 ROLL-LAMINATOR

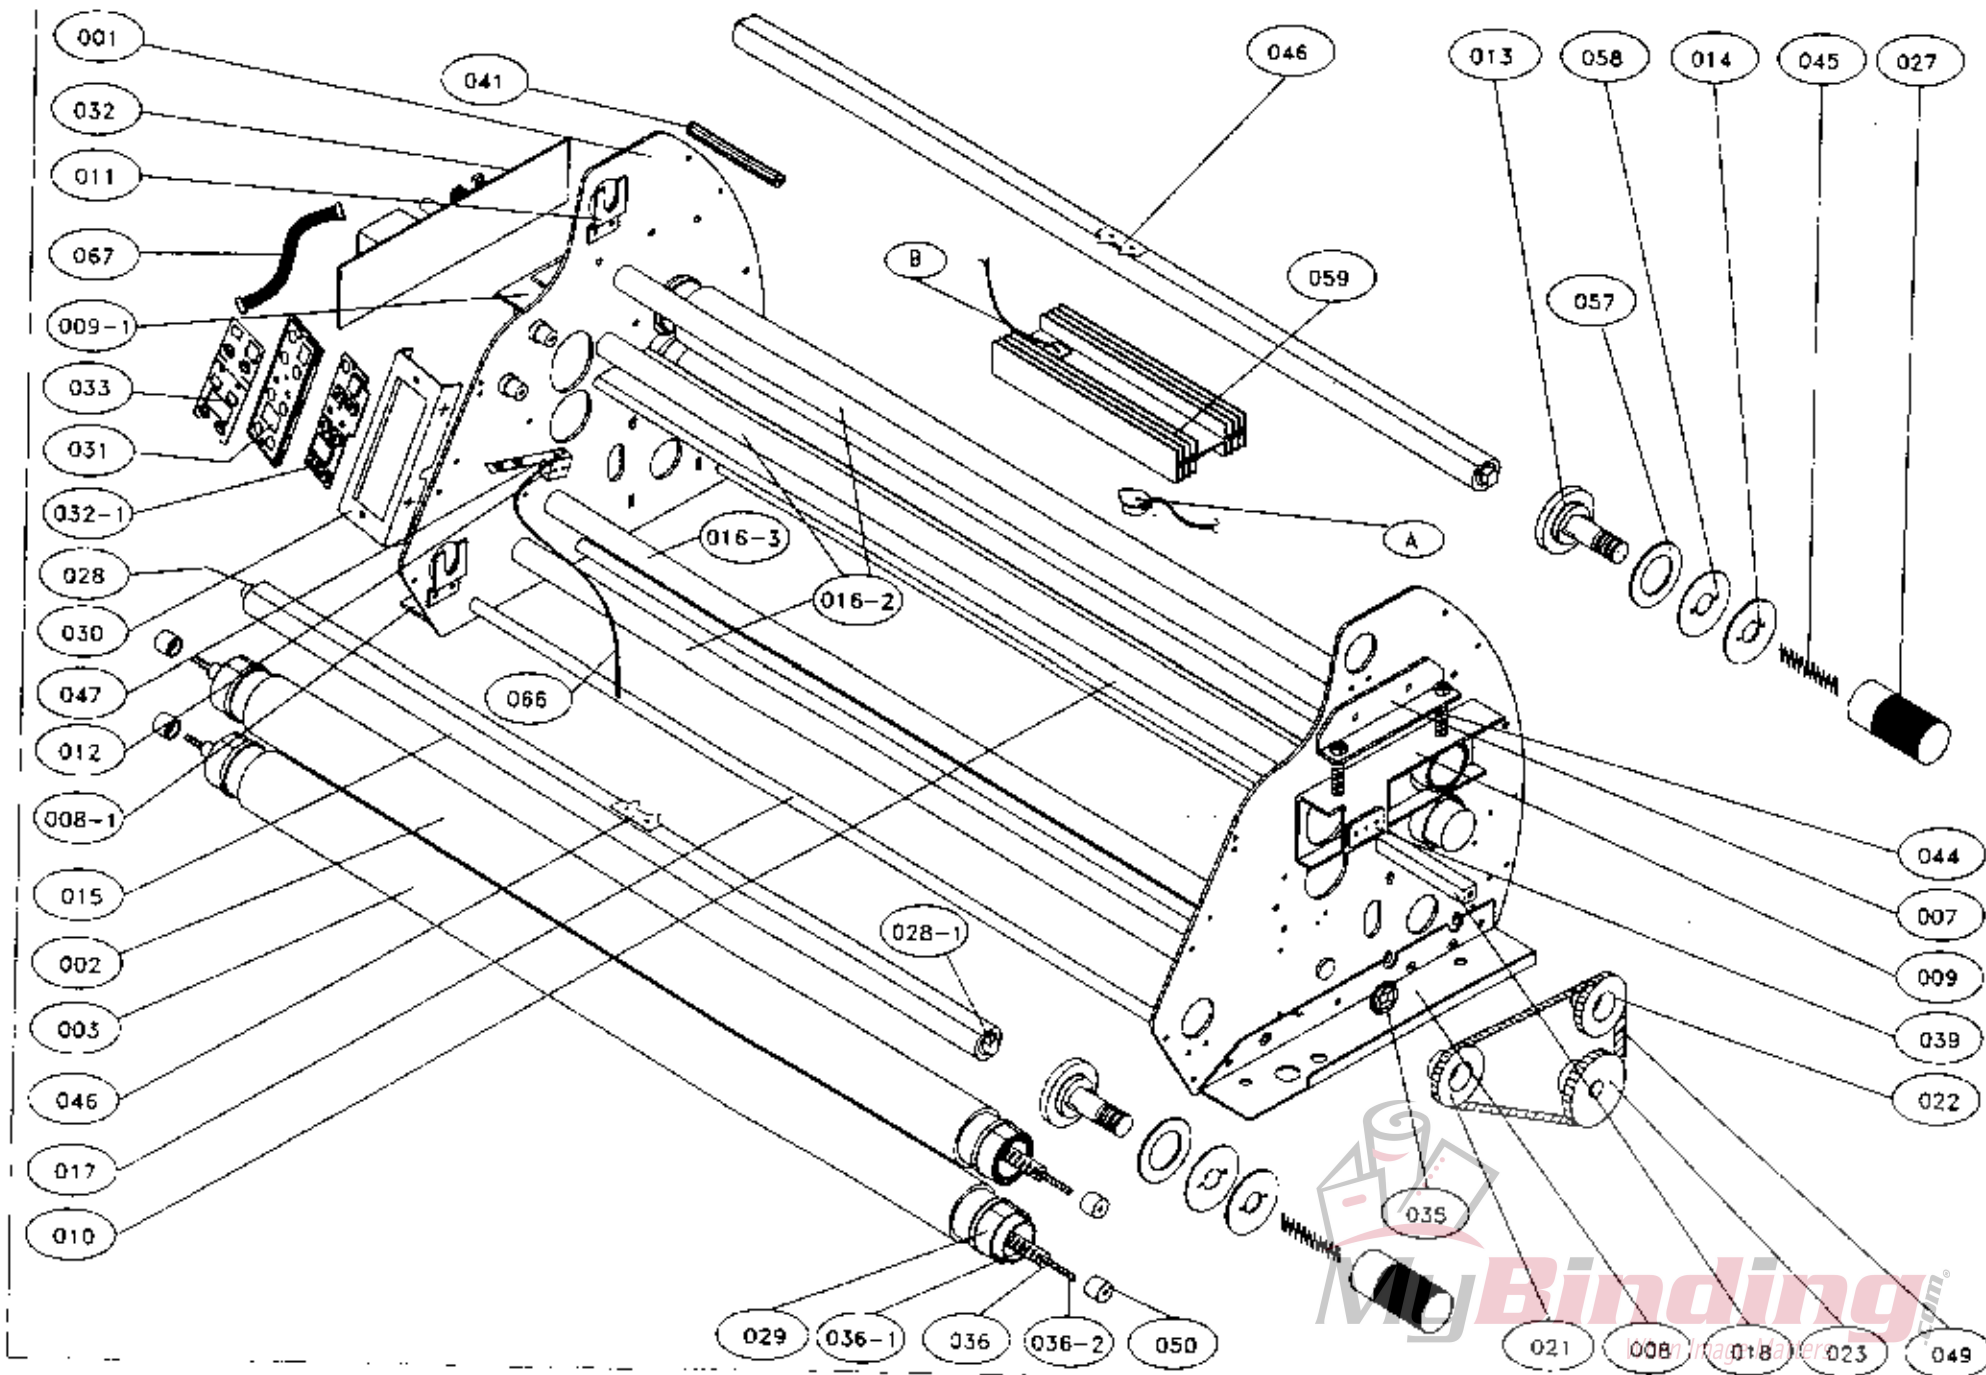

# TCC-2700 ROLL - LAMINATOR

