

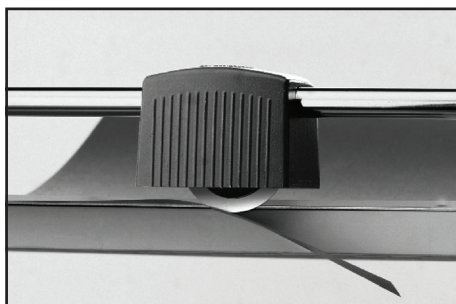
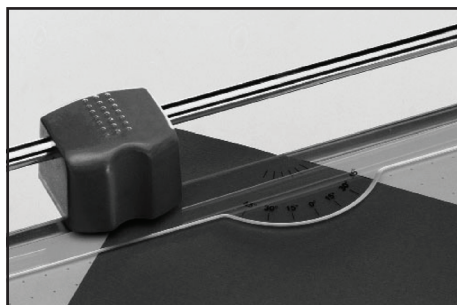


Betriebsanleitung
Operating Instructions
Mode d'emploi
Gebruiksaanwijzing
Manuale d'istruzione
Instrucciones de uso
Manual de instruções
Инструкция по эксплуатации

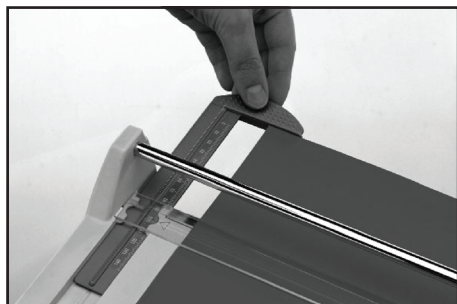

Keine Bedienung durch Kinder!
Children must not operate the machine!
Pas d'utilisation par un enfant!
Bediening niet door kinderen!
Non lasciare utilizzare il tagliacarte a bambini!
No dejar que la utilicen los niños!
Crianças não devem operar com a máquina!
Не допускайте детей к пользованию аппаратом!

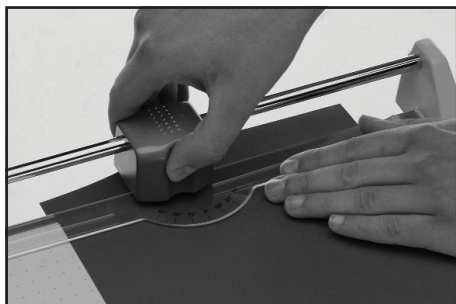

Rollenschneider
Rotary Trimmer
Coupeuse
Rolsnijder
Taglierina a lama rotante
Cizalla de rodillo
Cisalhas
Роликовый резак
IDEAL 1030
IDEAL 1031