

***Luxor RECLAIM Clear Acrylic
30" x 24" Clamp-On Sneeze Guard
Cubicle Wall Extender***

Instruction Manual



Provided by


MyBinding.com
When Image Matters.

Call Us at 1-800-944-4573

DIVWT 2 Clamp Wall Top Divider Panel Assembly Guide


Part List

Tools Needed:
Allen Wrench
(Included)
Screw Driver
(Not Included)

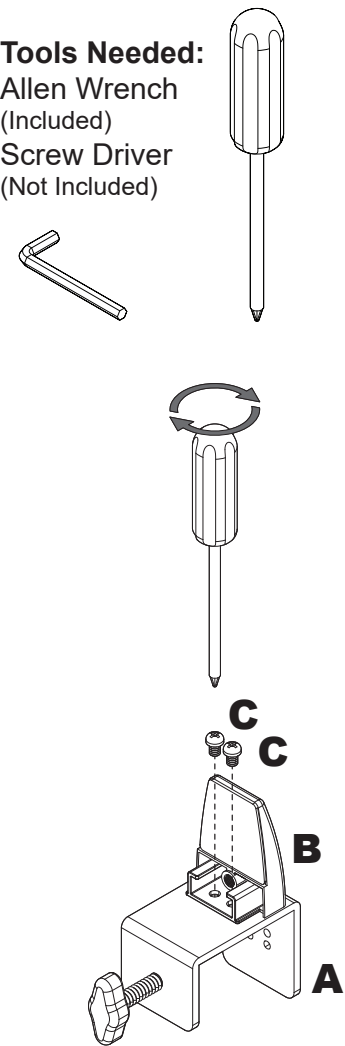


①

Attach B to A with Screws C

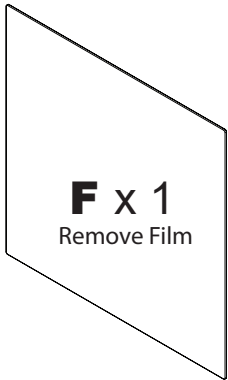


②

Attach D with Screw E

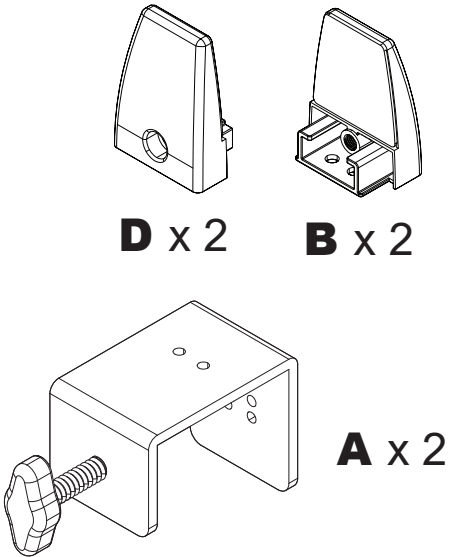



③

Install F into Assembled Clamps
Tighten Clamps

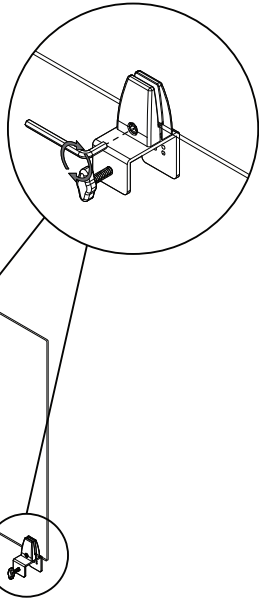

④



Install Divider Panel onto Wall
Tighten Clamps to Wall

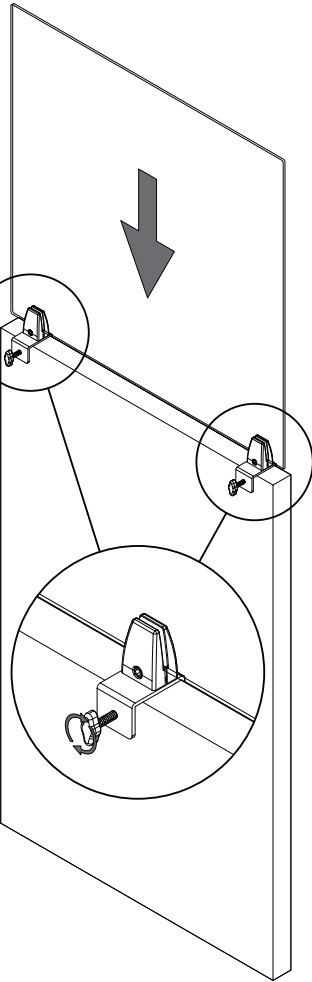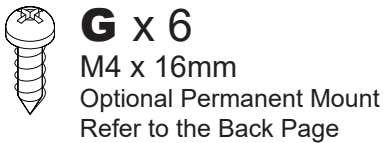


DIVWT 2 Clamp Wall Top Divider Panel Assembly Guide

Optional Permanent Mount


Tools Needed:
Allen Wrench
(Included)
Screw Driver
Pencil
(Not Included)

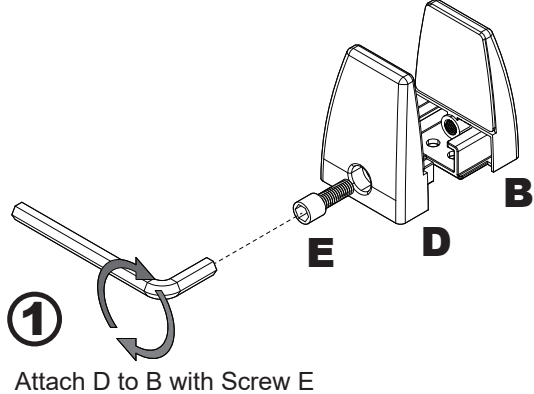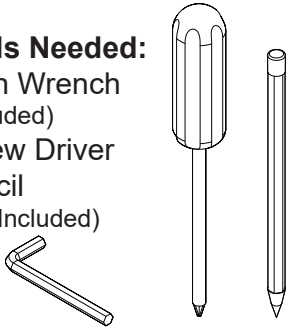


① Attach D to B with Screw E

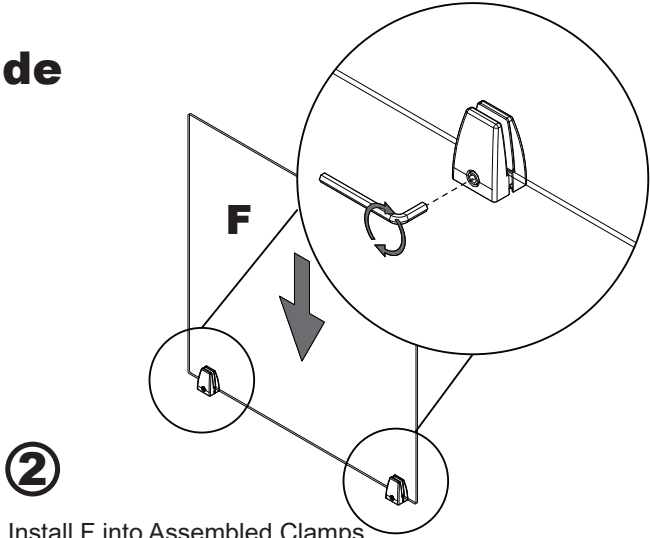


② Install F into Assembled Clamps.
Tighten Clamps.

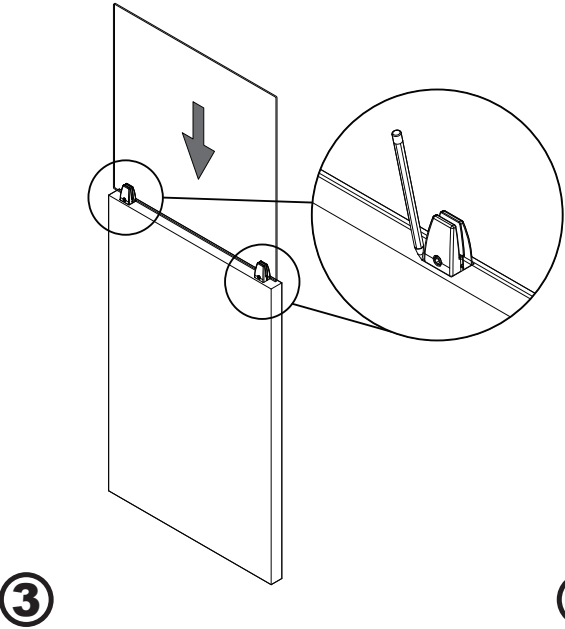

③ With Assistance - Place the Panel Assembly
on the Wall and Outline the Clamps
with a Pencil.

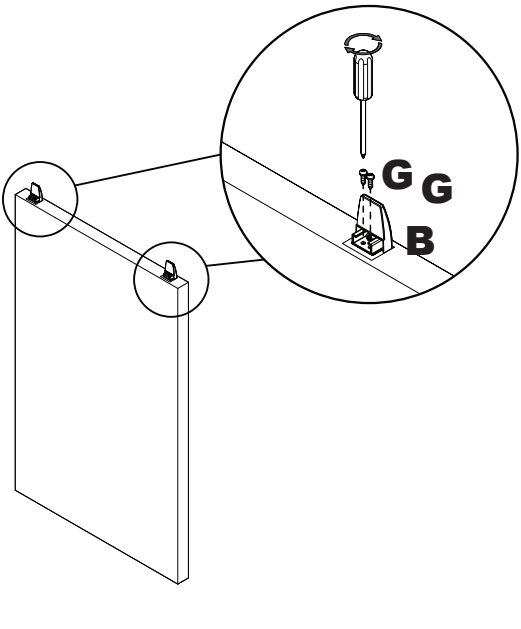

④ Remove and Disassemble the Panel Assembly.
Place Part B on the Wall in the Outline Location
and Secure with Screws G.

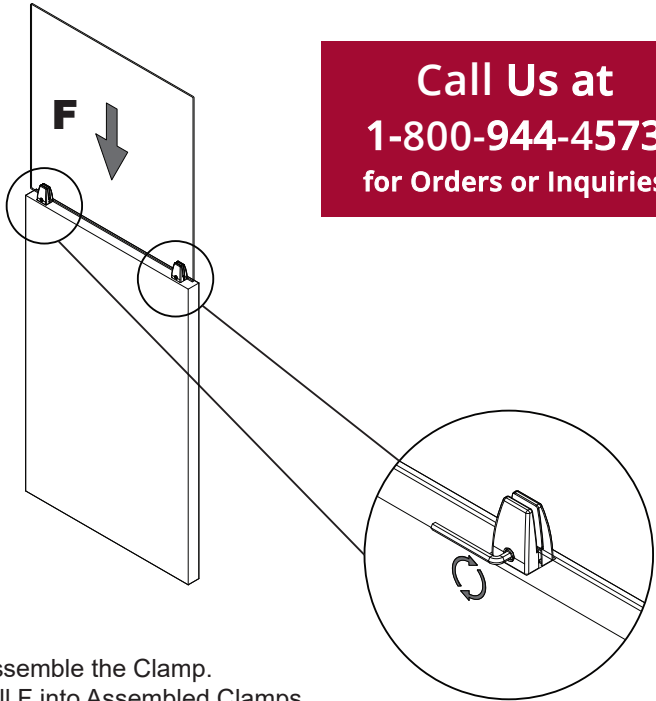

④ Reassemble the Clamp.
Install F into Assembled Clamps.
Tighten Clamps.

Call Us at
1-800-944-4573
for Orders or Inquiries