

Polar Laminating Film Sheets

Instruction Manual



Provided by

MyBinding.com

When Image Matters.

Call Us at 1-800-944-4573

Polar Laminating Film Sheets

UV LAMINATING FILMS COATED WITH COLD ADHESIVE

INSTRUCTIONS



Figure 1

1. (Figure 1) Peel Back 2” of the cover sheet from one end of the laminating film.



Figure 2

2. (Figure 2) Tack the Laminating film to a Sled or backing board. A Sled is a non-stick board. Insure your Sled is larger than the print you are laminating. Make sure the tacked edge is smooth.

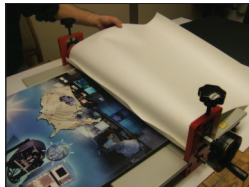


Figure 3

3. Position your print under the laminate film.

4. (Figure 3) Remove the remaining Coversheet on the laminating to expose the adhesive on the film. If using a laminator (shown), insert the tacked edge into the laminator to hold your film and Sled. Make sure the opening between the top and bottom roller matches your sled thickness and you have sufficient pressure. Flip the laminate film forward over the top roller (If you have a Media Guide, insert it between the Media Guide and the Top Roller).

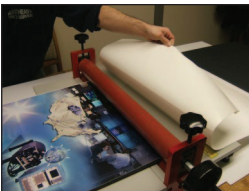


Figure 4

5. (Figure 4) Remove the rest of the Coversheet exposing the adhesive on the film. (If you have a Media Guide Close the Guide)



Figure 5

5. (Figure 5) Roll Down your film. If you are using a laminator, hold your print smooth against the roll (If you have a Media Guide, insert your print between the Media Guide and top roller and close the Media Guide to hold your print against the roller. Then roll down your print to adhere the film to your print.

6. Display your print. Trim if necessary. Hardware, easels, hangers and more are available if you need them to complete your display.