

# ***Best-Rite 5' x 16' Type H***

## ***Combo-Rite Porcelain Whiteboard and Tackboard***

### **Instruction Manual**



***Provided by***

***MyBinding.com***  
*When Image Matters.*

**Call Us at 1-800-944-4573**

## Which board assembly instructions should you use?

### Use **L-Clip** instructions for...

ABC Trim

Aluminum Trim

Deluxe Wood Trim

48 Trim

### Use **Z-Clip** instructions for...

Ultra Trim

Presidential Trim

31 Trim

Euro Trim

Scroll down for instructions.

**Z Clip Install Instructions**

**1.**

Wall Stud  
Top Edge of Board  
3/4"  
Board Location  
Draw line

Determine board location. Measure from floor to the top edge of board. Mark with pencil line the corner location. Measure down from top edge of board 3/4", and draw line as shown. Locate stud near each end of board and drill pilot hole along line using 1/8" drill bit.

**Note:**  
Install Masonry Anchors (D) into 1/4" Diameter predrill holes for masonry walls.

Install Drywall Anchors (E) into 1/4" Diameter predrill holes for sheet rock walls.

**2.**

Board Location

Attach Z-Hangers (E) using Long Screws (A) as shown.

**3.**

Board Location  
Board Location  
Bottom Edge of Board  
Draw line

Lift, Tilt, and Slide Board down over the Z-Hangers. Z-Hangers should catch in the top trim on the back of the board. Draw line along bottom edge of board.

Z Brackets hang in the trim on back of board

**4.**

Board Location  
Drill Hole  
Bottom Edge of Board  
Draw line  
1 1/8"

Lift and remove board from the Z-Hangers. Measure up from bottom line of board 1-1/8", and draw line as shown. Locate stud near each end of board and drill pilot hole along line using 1/8" drill bit.

**5.**

Board Location  
Board Location  
Bottom Edge of Board  
Draw line

Secure 2 bottom brackets (F) to the wall using 2 long screws (A) as shown. Hang board on the Z-Hangers (E).

**6.**

Board Location  
Board Location  
Bottom Edge of Board  
Draw line

Secure board to bottom brackets (F) using 2 short screws (B) as shown.

**Parts List**


P1 Board

**Hardware List**

A Long Screw  
B Short Screw  
C Screw Anchor - Concrete (For Concrete walls)  
D Screw Anchor - Drywall (For Drywall)  
E Z Hanging Bracket  
F Bottom Bracket

**Z Clip Install**

**L Clip Install Instructions**

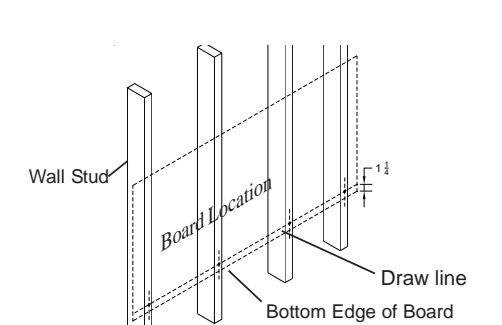

Wall Stud


Board Location

Draw line

Bottom Edge of Board

1 1/4"

**1** Determine board location. Measure from floor to the bottom edge of board. Mark with pencil line the corner location. Measure up from bottom edge of board 1-1/4" and draw line as shown. Locate stud near each end of board and drill pilot holes along line using 1/8" drill bit. See diagram below.

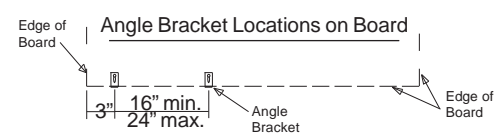

Edge of Board

Angle Bracket Locations on Board


3" 16" min. 24" max.

Angle Bracket

Edge of Board

**Note:**  
Install Masonry Anchors (D) into 1/4" Diameter predrill holes for masonry walls.


Install Drywall Anchors (E) into 1/4" Diameter predrill holes for sheet rock walls.

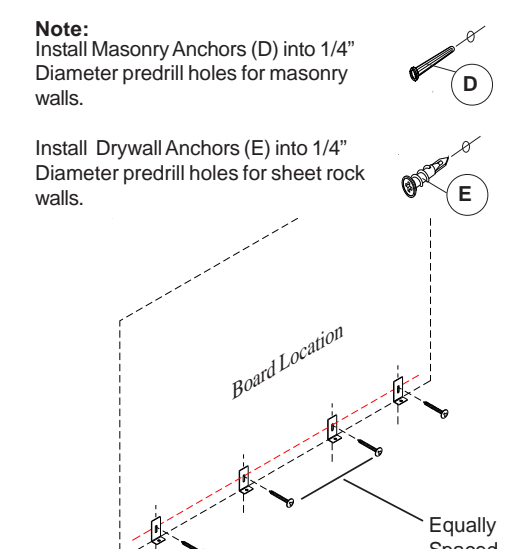


Board Location

Equally Spaced

**2** Attach 1/2 the # of Angle Brackets using Long Screws (B) as shown.

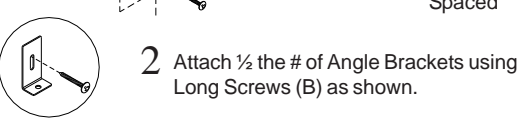


Board Location

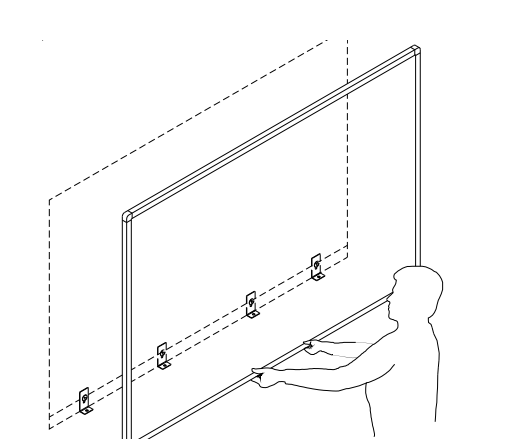


Board Location

**3** Set board on the Angle Brackets. Draw line along top edge of board.

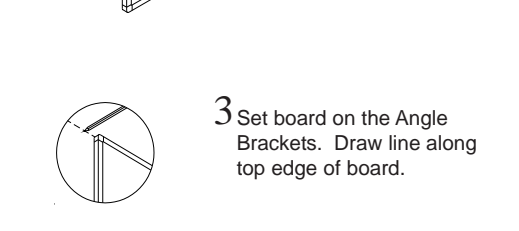

Board Location

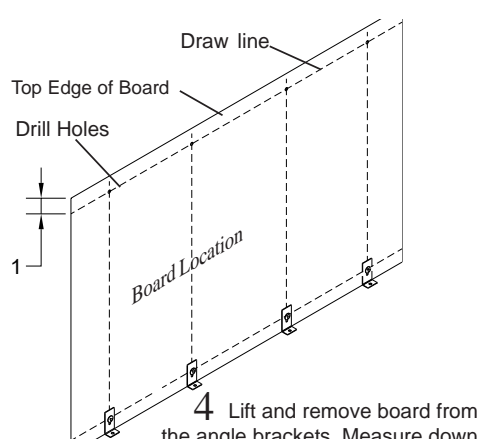

Draw line


Top Edge of Board

Drill Holes


1

Board Location

**4** Lift and remove board from the angle brackets. Measure down from top line of board 1" and draw line as shown. Locate stud near each end of board and drill pilot hole along line using 1/8" drill bit.

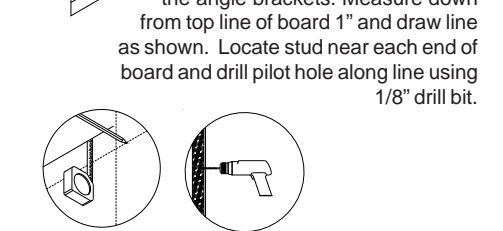


Drill Holes

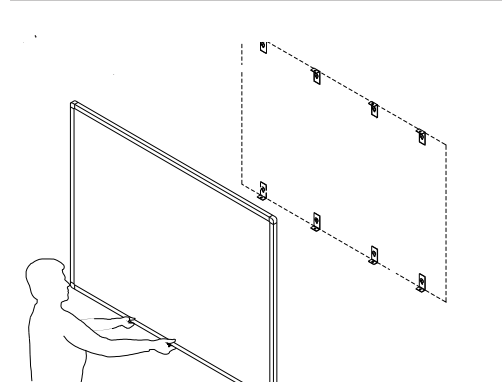


Board Location

**5** Secure top Angle Brackets (A) to the wall using long screws (B) as shown. Follow diagram in Step 1. Set board on the bottom angle brackets.

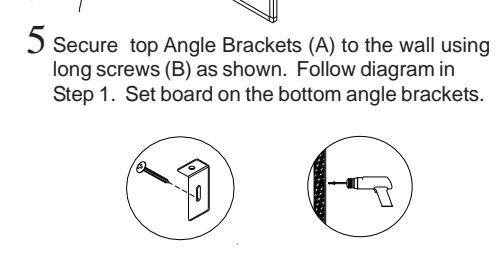


Drill Holes

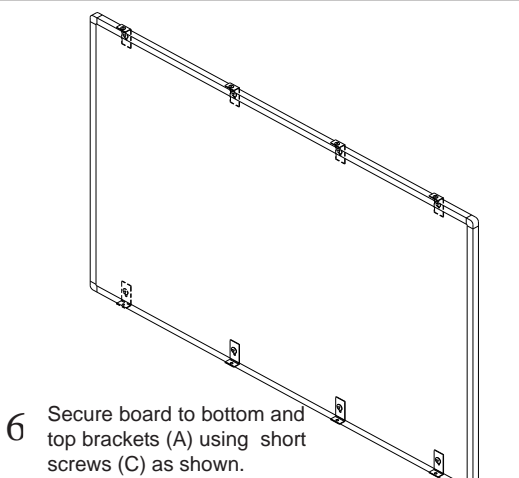

Board Location

**6** Secure board to bottom and top brackets (A) using short screws (C) as shown.

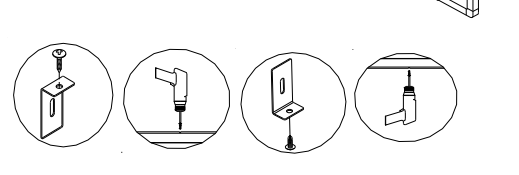

Drill Holes

**Parts List**

P1 Board

**Hardware List**

A Angle Bracket

B Long Screw


C Short Screw

D Screw Anchor-Concrete

E Screw Anchor-Drywall

L Clip Install\_12-12-14

**L Clip Install**

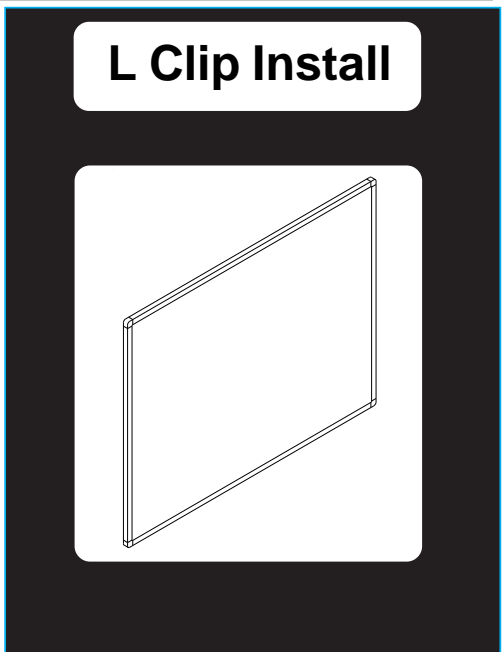

Board Location




# Attention



**Please read and follow these instructions!**  
**Failure to follow these instructions will void your warranty and could result in board failure and possible injury.**

1. Always use the correct supplied mounting hardware for the type wall your board will be mounted on.
2. Use the correct stated predrill for the type anchor you will be using.
3. The Angle Brackets and Z Clips **MUST** be installed according to the layout and spacing as shown below.

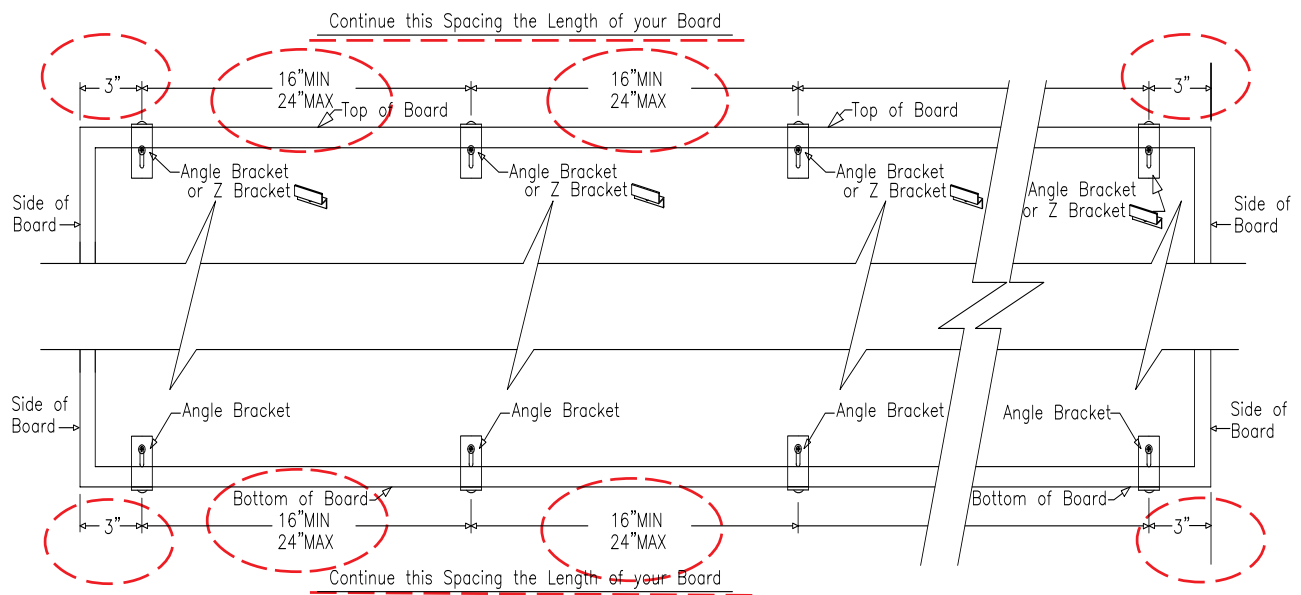


**NOTE: For more information, please refer to our web-site:**  
**[www.partsandinstructions.com](http://www.partsandinstructions.com)**

L-Clip\_09-08-15

**WWW.MYBINDING.COM**

## Proper L-Clip Layout

**Your top and bottom L-Clip layouts should be spaced like this for an 8' wide board.**

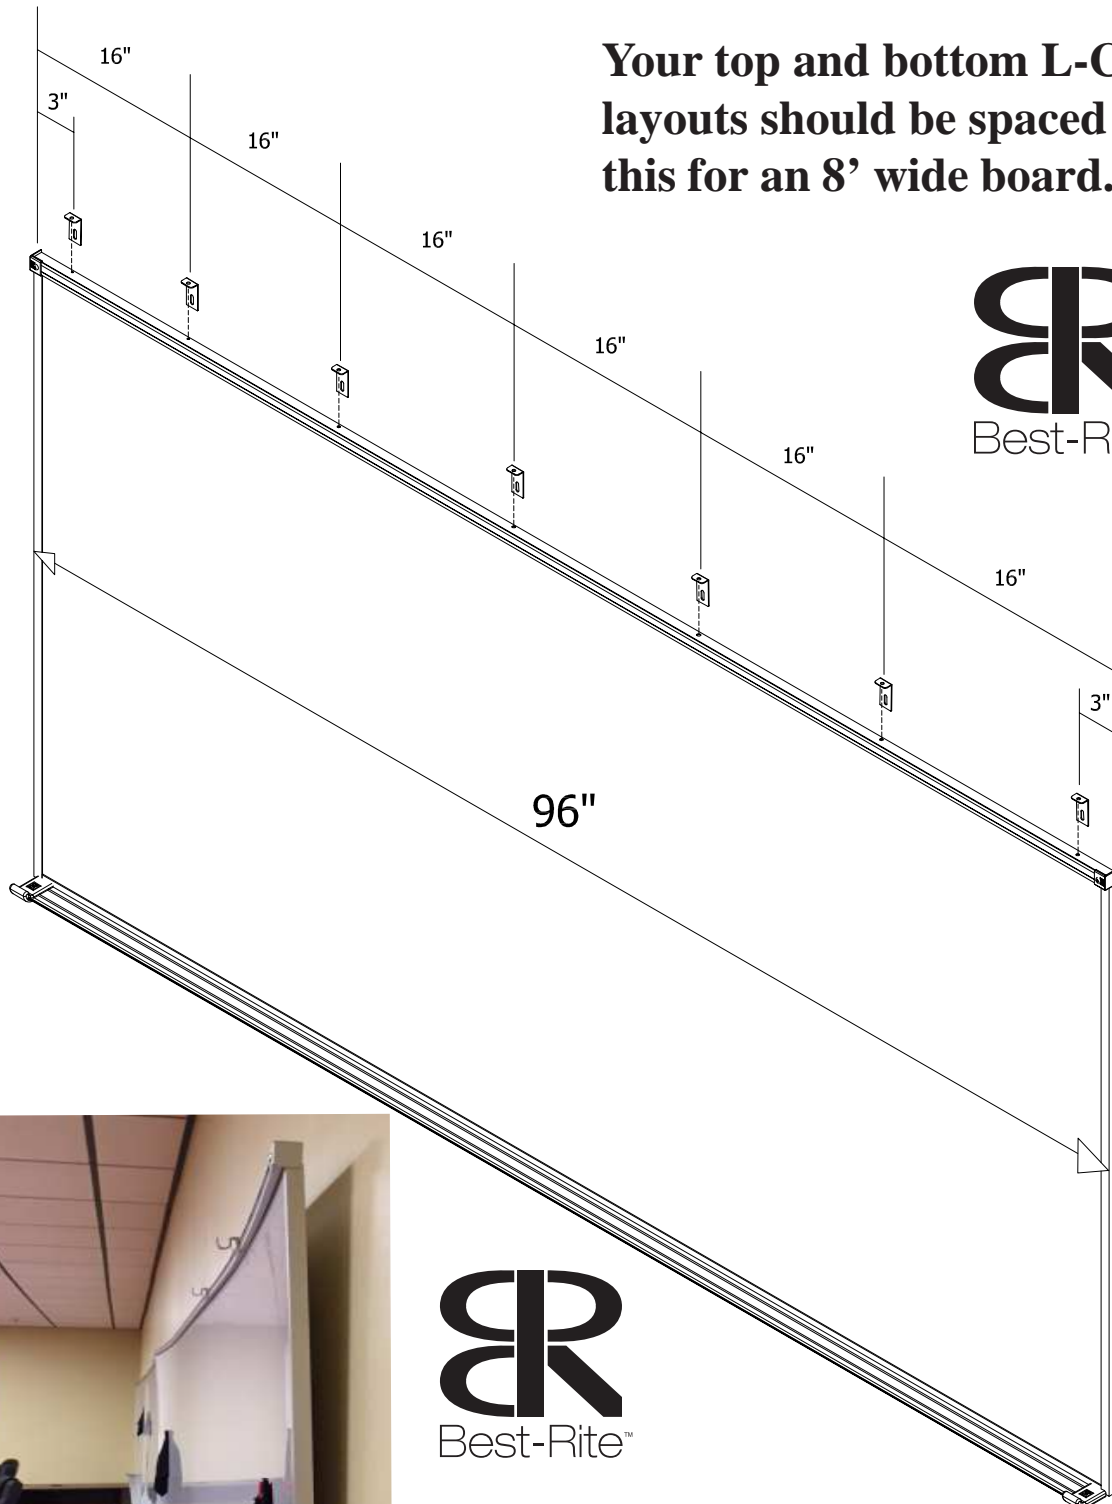

**If you don't use this number of L-Clips on top and bottom, your board could end up like this. Please follow these installation directions.**