Luxor 16-Tablet/Chromebook Vertical Wall / Desk Charging Box

Instruction Manual



WARNING: Two people are required to

attach this charging station to a wall.

Parts List

Note: Hardware provided is for drywall installation. If attaching to other material fasteners are to be furnished by other.

- Tape Measure

Tools Required

- Level
- Drill
- 1/4" Drill Bit (No Stud) - 1/8" Drill Bit (Stud)

- Extended Drive Phillips

1/22/2016

- Level
- Stud Finder - Pencil













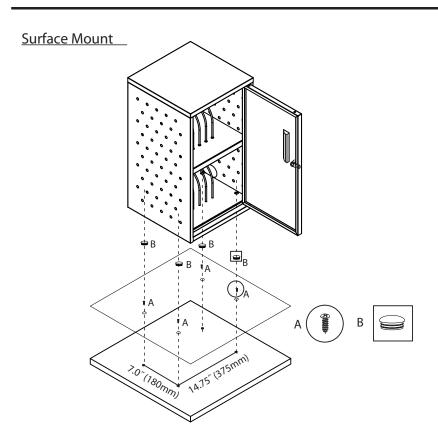

- 1. Place the unit in the desired location.
- 2. Using a pencil, mark the front two holes.
- 3. Using a pencil, mark the back two holes through the side grommet holes.
- 4. Remove the unit, and confirm marks are in the correct location (14.75" left to right, and 7.0" front to back).
- 5. Mark a center point between the back two holes.
- 6. Drill 5 holes using the 1/8" drill bit.
- 7. Return the unit, and secure in place with screws, and cover screws with cap (A and B).

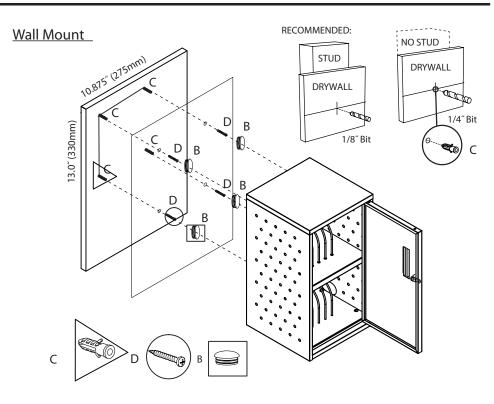

Assistance required on all steps

- 1. Place the unit in the desired location.
- 2. Level the unit, and hold in place.
- 3. Mark the top 2 holes with a pencil.
- 4. Mark the bottom 2 holes with a pencil through the grommet holes.
- 5. Remove the unit, and confirm holes are in the correct location (10.875" left to right, and 13.0" top to bottom).
- 6. If mounting to drywall, drill holes with the 1/4" drill bit, and place anchors (C) in the holes
- 7. If mounting to a stud, drill holes with 1/8" drill bit
- 8. Return the unit to the location, and secure in place with screws, and cover screws with cap (D and B).