





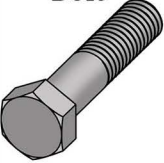

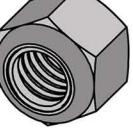
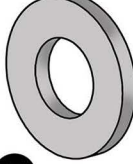

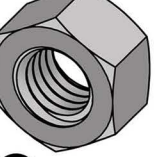
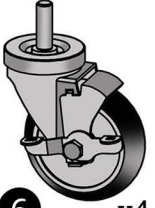

MONDO MOBILE RACK PARTS

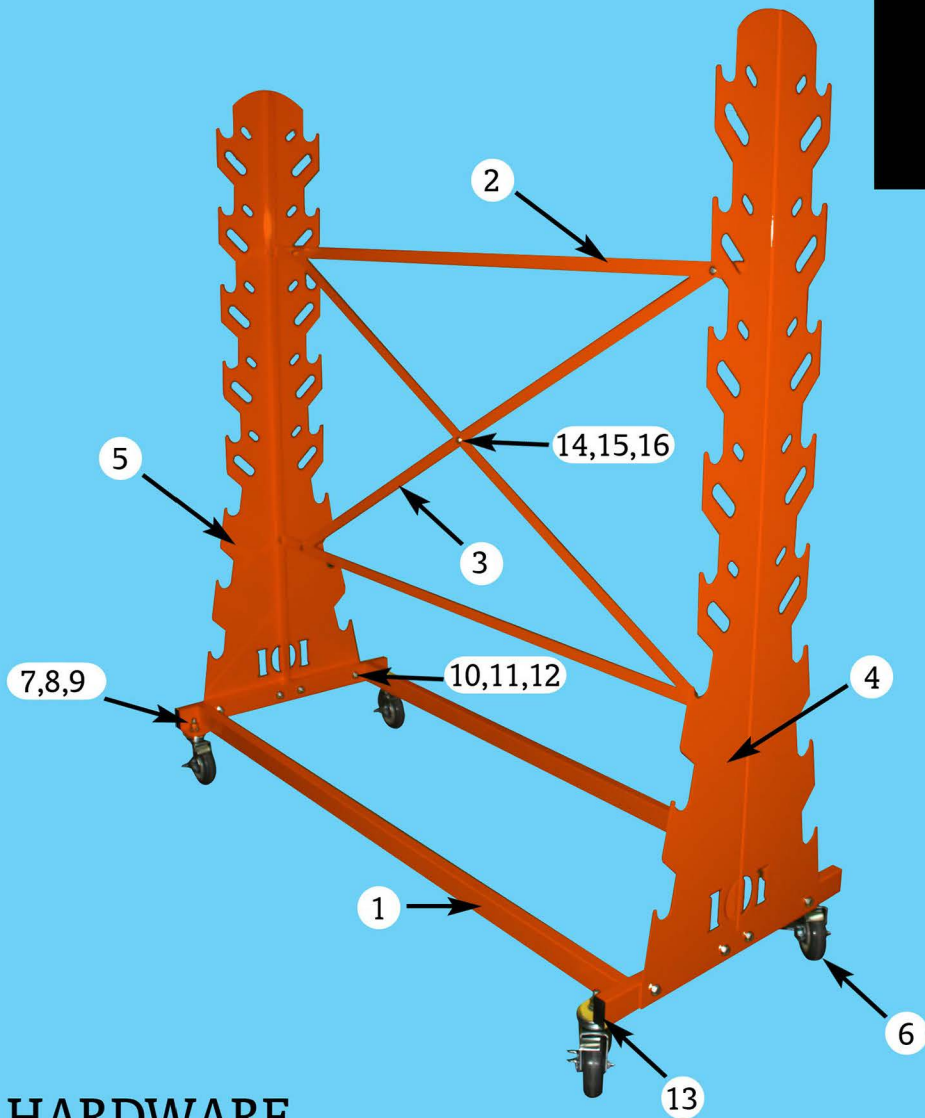

ITEM #	Description	Qty.
1	Cart Base	1
2	Horizontal Support	2
3	Cross Brace	2
4	Left Upright 62	2
5	Right Upright 62	2

ITEM #	Hardware Description	Qty.
6	4" Caster	4
7	1/2 Flat Washer	4
8	1/2 - 13 Nut	4
9	1/2 Lock Washer	4
10	3/8 Flat Washer	8
11	3/8 - 16 Locknut	8
12	3/8 - 16 Bolt	8
13	1 x 2" Plastic Plug	4
14	1/4 - 20 Locknut	9
15	1/4 - 20 Bolt	9
16	1/4 Flat Washer	18

HARDWARE


1/4 - 20 Bolt  15 x9	1/4 Flat Washer  16 x18	1/4 - 20 Locknut  14 x9	3/8 - 16 Bolt  12 x8	3/8 Flat Washer  10 x8	3/8 - 16 Locknut  11 x8	1/2 Flat Washer  7 x4	1/2 Lock Washer  9 x4	1/2 - 13 Nut  8 x4	4" Caster  6 x4	1" x 2" Plastic Plug  13
---	--	--	---	---	--	--	--	---	--	---

MONDO MOBILE RACK INSTRUCTIONS


Holds 16 Rolls up to 60" Wide



1. Open Box - Remove all contents
SEE BACK OF PAGE FOR PARTS LIST

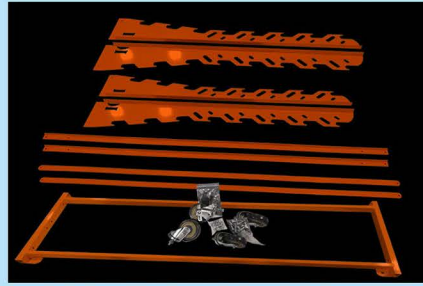

2. Lay all items on the floor and verify you have all contents necessary for assembly

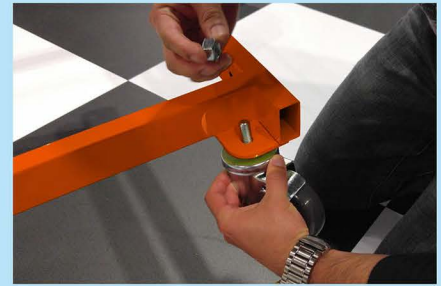


3. Begin bolting wheels onto base frame making sure each wheel is tight



4. Lock wheels into place for easier assembly of rest of rack



5. Using the longer bolts and nuts, start adding rack sides

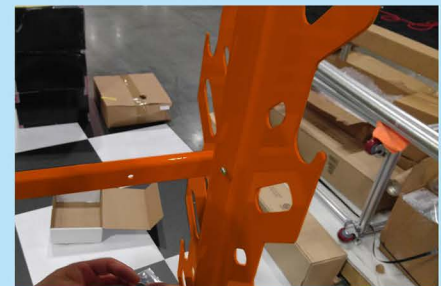

6. Before tightening all the rack side bolts, begin adding cross beams and braces.



7. Start with the top horizontal cross beam (straight beam w/bend in it) and then the bottom cross beam



8. Then begin bolting the X cross braces starting with the center bolt and nut and then bolt it to the horizontal beams top and bottom



9. Tighten all bolts and nuts on cross braces and horizontal beams and then double check all rack sides and wheels for tightness.



10. Add black plastic end caps to the frame ends



11. You are done!

Part# MMR1600