Standard DocuCrease 35 Manual 14" Hand Creaser






Call Us at 1-800-944-4573

OPERATOR / PARTS MANUAL

Standard DocuCrease DC35 / DC52 Channel Scorers

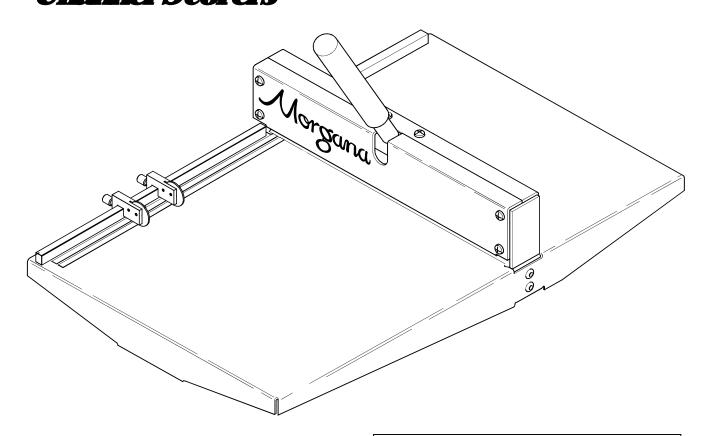

Read this manual, and thoroughly familiarize yourself with its contents before operating or servicing this equipment.

DOCUCREASE/PTOM



Morgana Docu-Crease 35 and 52 Operating Instructions

Installation and Safety

Place the Docu-Crease on a stable bench or table.

Note the weight of the A3 Docu-Crease 35 = 13kgs

and the A2 Docu-Crease 52 = 17kgs

The Docu-Crease has been ergonomically designed to relieve operator fatigue as much as possible. Please recycle the packaging.

Usage

Creases paper or board up to approximately 350gsm. Suppresses damage to toner, ink and cardboard when folding.

Maximum creasing width is:

350mm with Docu-Crease 35 520mm with Docu-Crease 52

Applications

- Laminated stock, digital printing processes using toner or ink, laser colour or black and white copies, cardboard, coated stock, varnished surfaces, sensitive surfaces.
- Folding paper or cardboard against the grain.
- Greeting cards, reply cards, invitations, menus, laminates or covers prior to adhesive binding or saddle stitching.
- The creasing tool width suits most available stocks and materials with out the necessity for adjustments.

Operation


- 1 Using the measurement scales, set the stops to the required position. Note the position for repeat jobs. Set the second stop for twin creasing applications.
- 2 Insert the material to be creased through the slot on the bed, under the first stop and align the material against the lay strip.
- 3 Keeping the material tight against the lay strip, slide the material towards the creasing head until it is clear of the stop. Then slide the material back towards the stop as as far as it will go.
- 4 Move the handle downwards until you feel a slight resistance when the top creasing blade is touching the material. Apply light downward pressure to the handle and an accurate crease will be formed. Lift the handle to the upright position. Remove the material if only one crease is required.


Note: Applying heavy pressure will not create a better or deeper crease and may even damage the mechanism.


- **5** When a second crease is required, move the material along to the second stop. Re-align again to the stop and lay strip as described in step 3.
- **6** Repeat the creasing process as described in step 4.
- **7** Hand fold along the crease. Note: always fold on the reverse of the creased side see diagram 7.







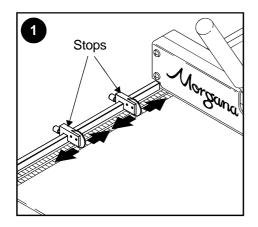


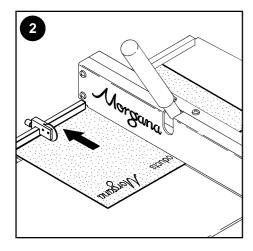


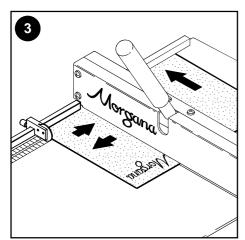

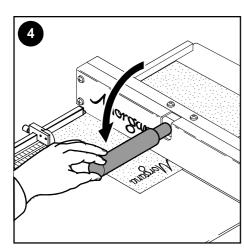


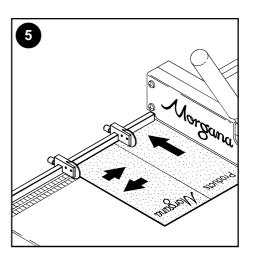

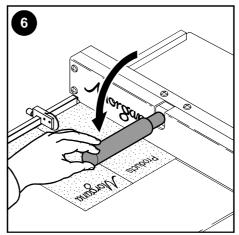

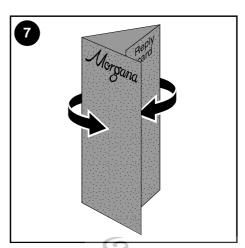


Morgana Docu-Crease 35 parts list

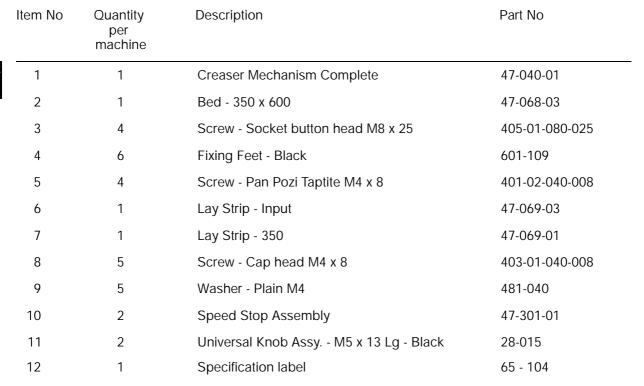






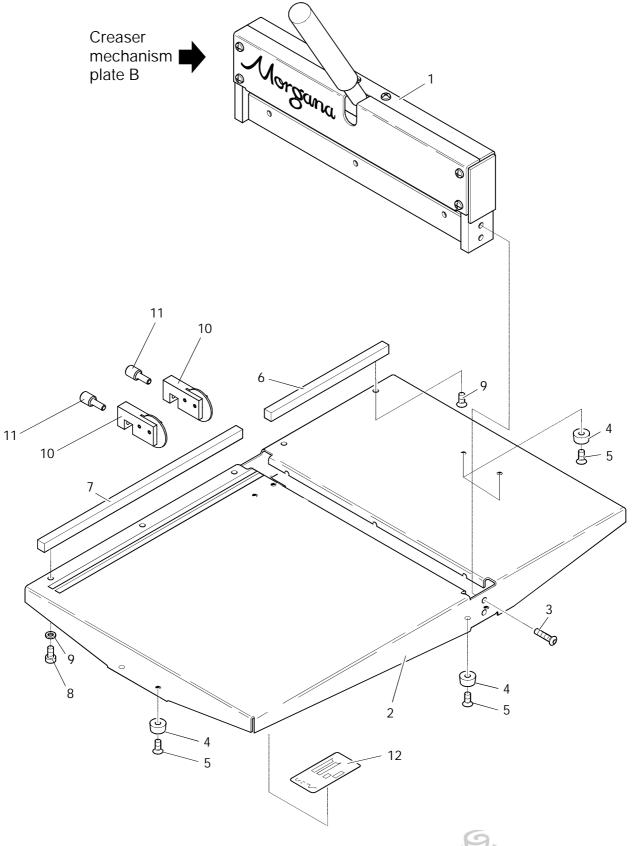

Morgana Docu-Crease 35 parts list

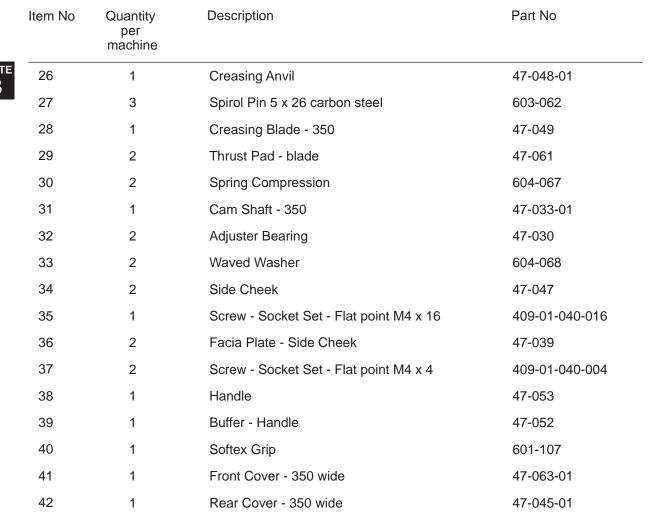


Screw - Pan Pozi Taptite M4 x 6




401-02-040-006

43


12






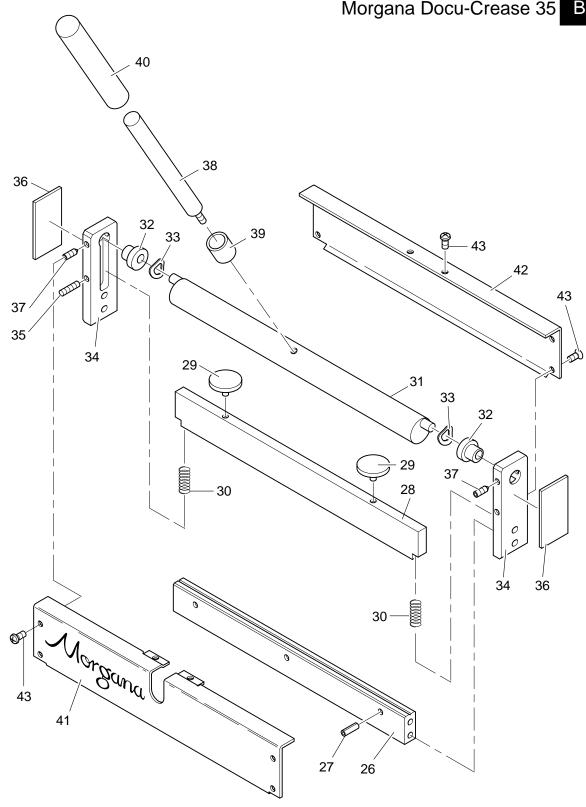

Morgana Docu-Crease 52 parts list

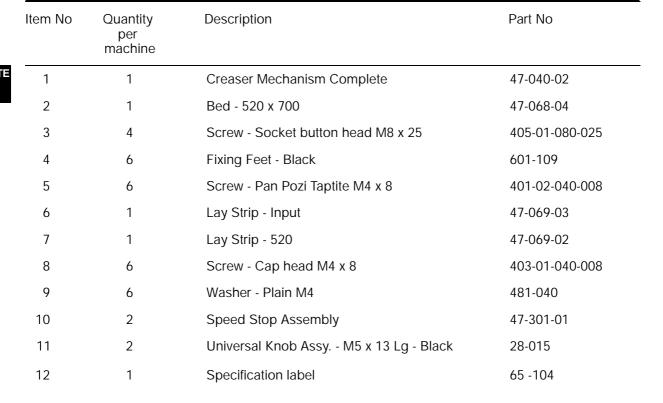



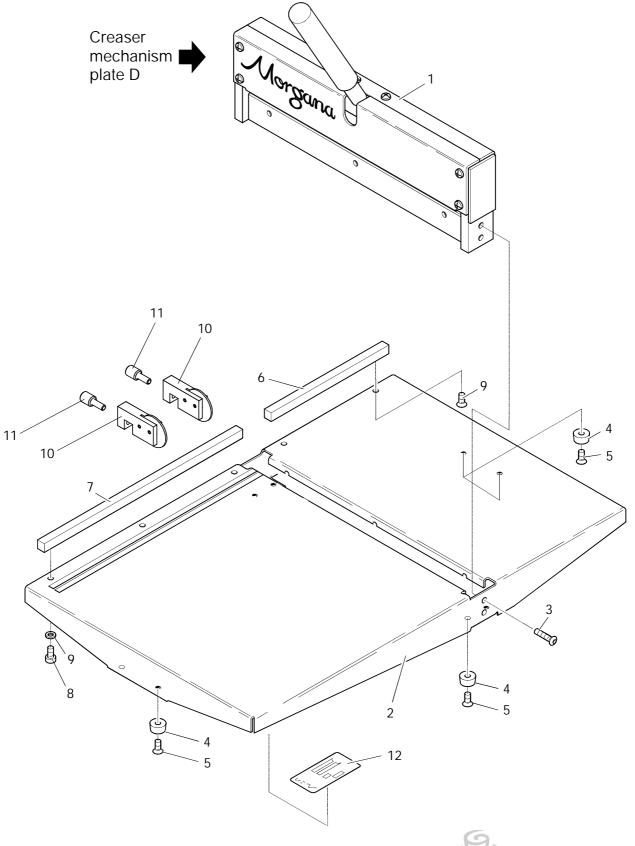

Morgana Docu-Crease 52 parts list

